


INSTALLATION MANUAL

For the most current release of this manual,
please visit our website at cogan.com

V.2014.2

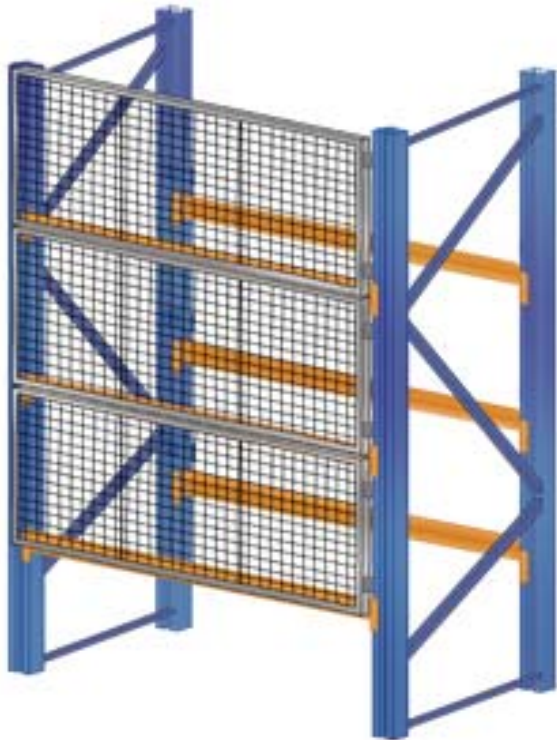

Roll formed racking



Structural racking

Product	Safegarde® Partition
Sub-product	Rack guard

- All panels are made of framed 2" x 2" x 10GA welded wire mesh.
- Two types of mounting brackets are available to accommodate both roll-formed and structural rack uprights. Flush mount, 6", 8" and 12" offset bracket available.
- Easy installation, all panels are pre-punched to be bolted to racking uprights using the mounting bracket.

© 2014 Cogan Wire and Metal Products Ltd., all rights reserved.



A Tradition of Quality Since 1901

cogan.com


use tek screw **only** if holes on the racking upright don't fit with the bracket.

Ø5/16"x1"
Hex bolt +
large washer


Ø1/4"x1"
hex tek screw




TOP VIEW OF ROLL
FORMED RACKING
UPRIGHT

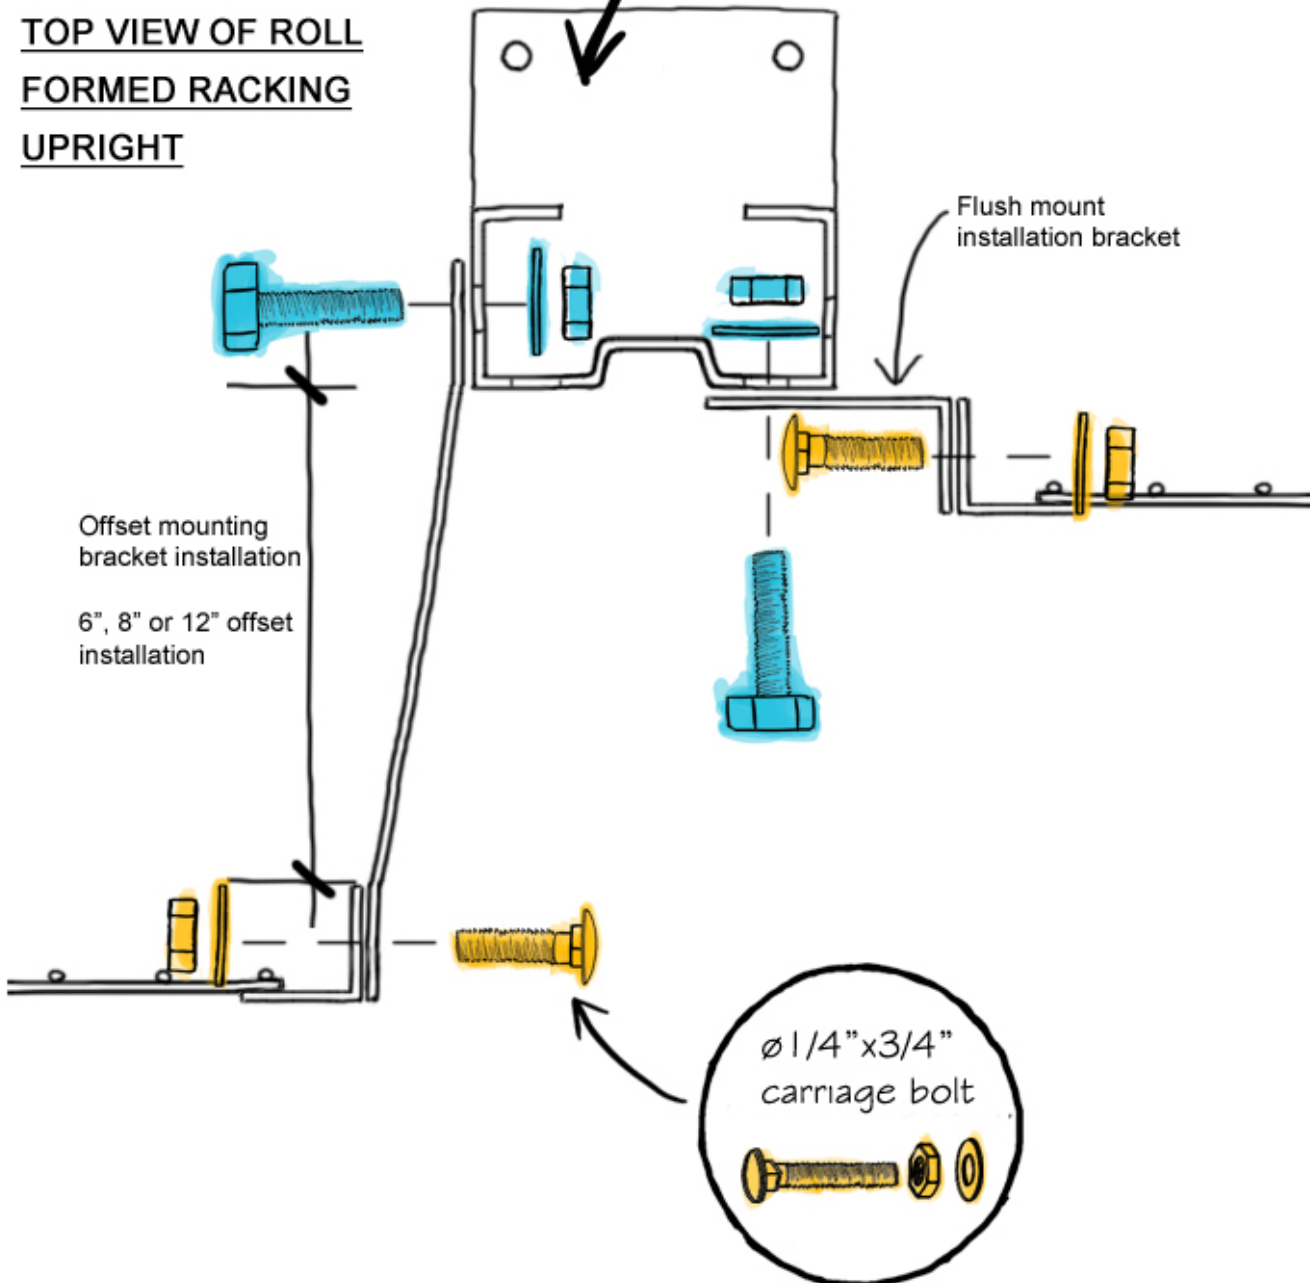


use tek screw **only** if holes on the racking upright don't fit with the bracket.

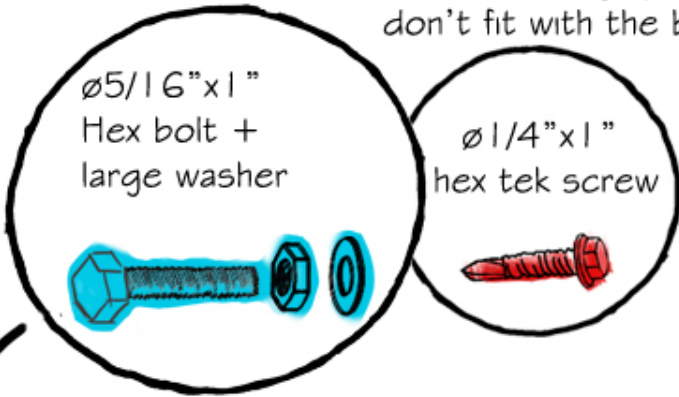


TOP VIEW OF
STRUCTURAL
RACKING UPRIGHT

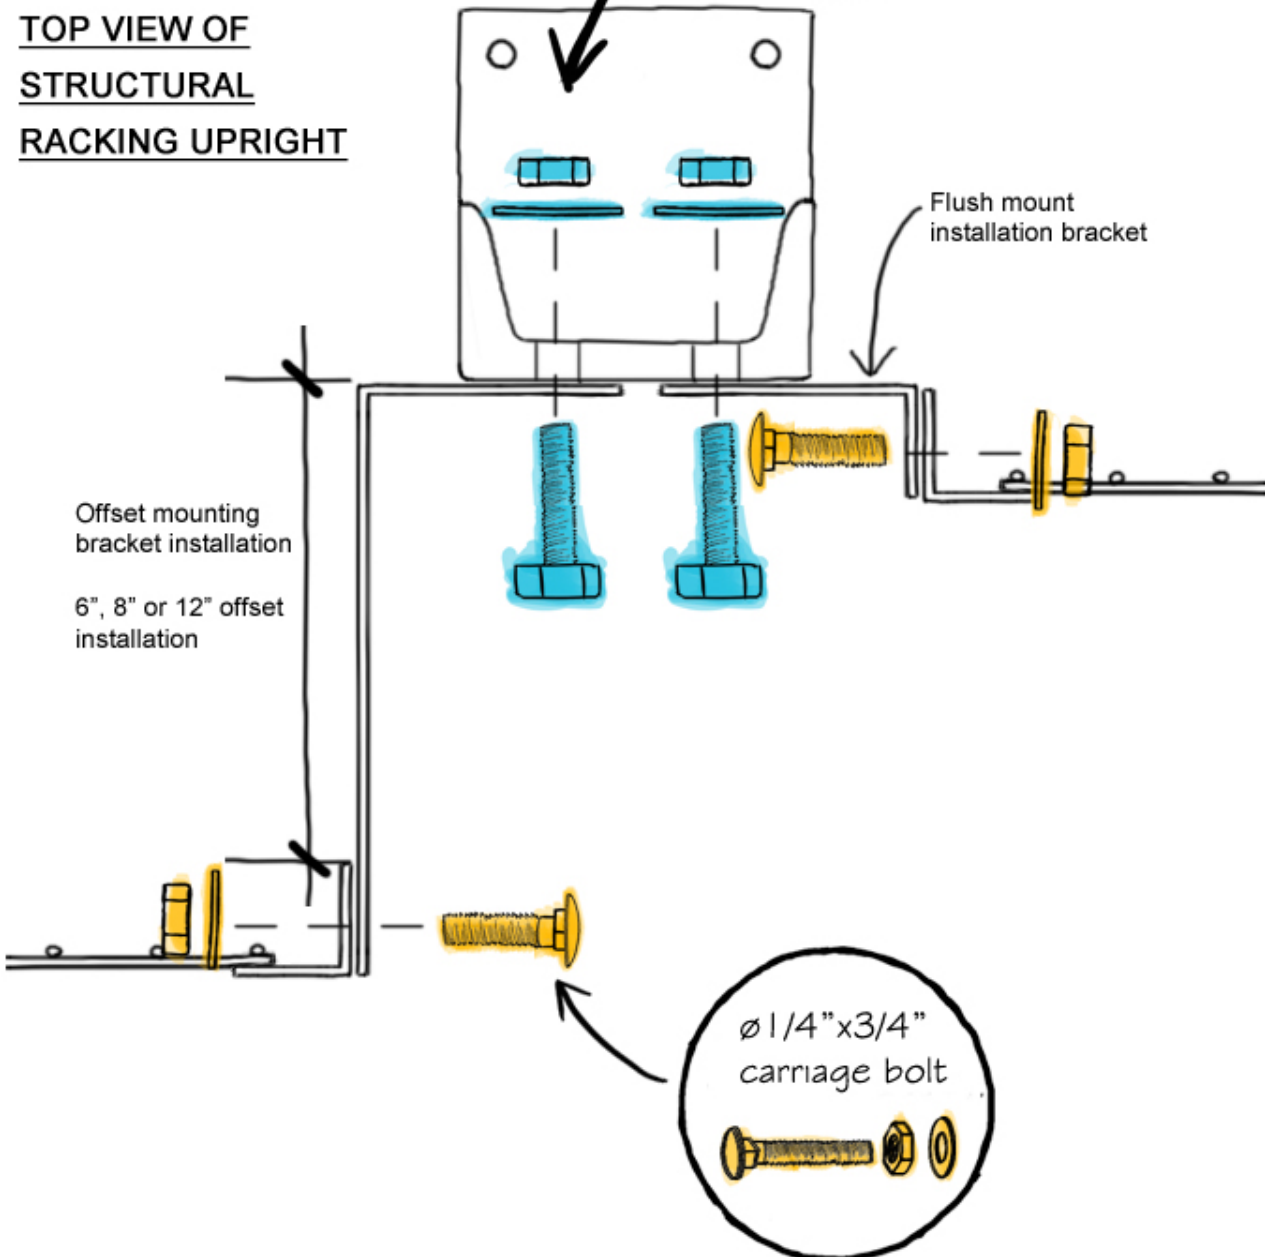

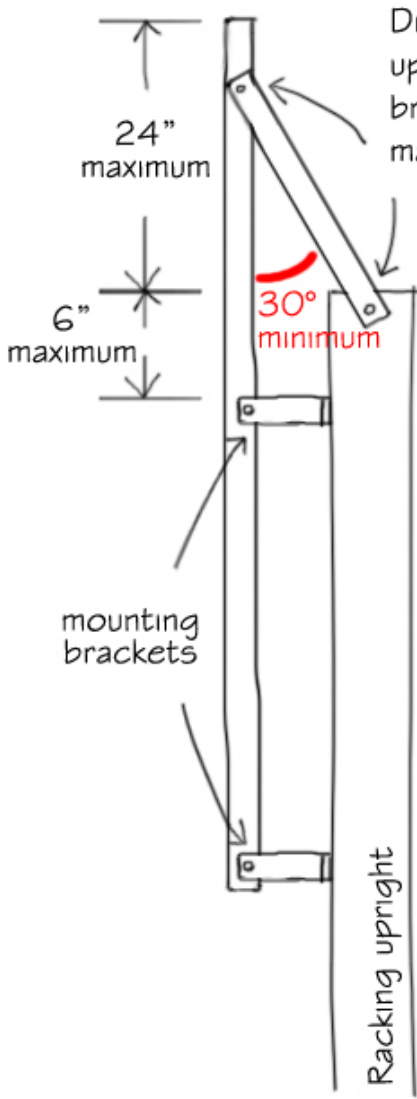

Drill holes in the racking upright to install the extension bracket as high as possible for maximum support of the panel.


The extension bracket should be installed at a 30 degree angle minimum. The panel should never exceed 24" from the top of the racking upright. Install the upper mounting bracket at 6" maximum from the top of the racking upright.

