


INSTALLATION MANUAL

For the most current release of this manual,
please visit our website at cogan.com

V.2014.1

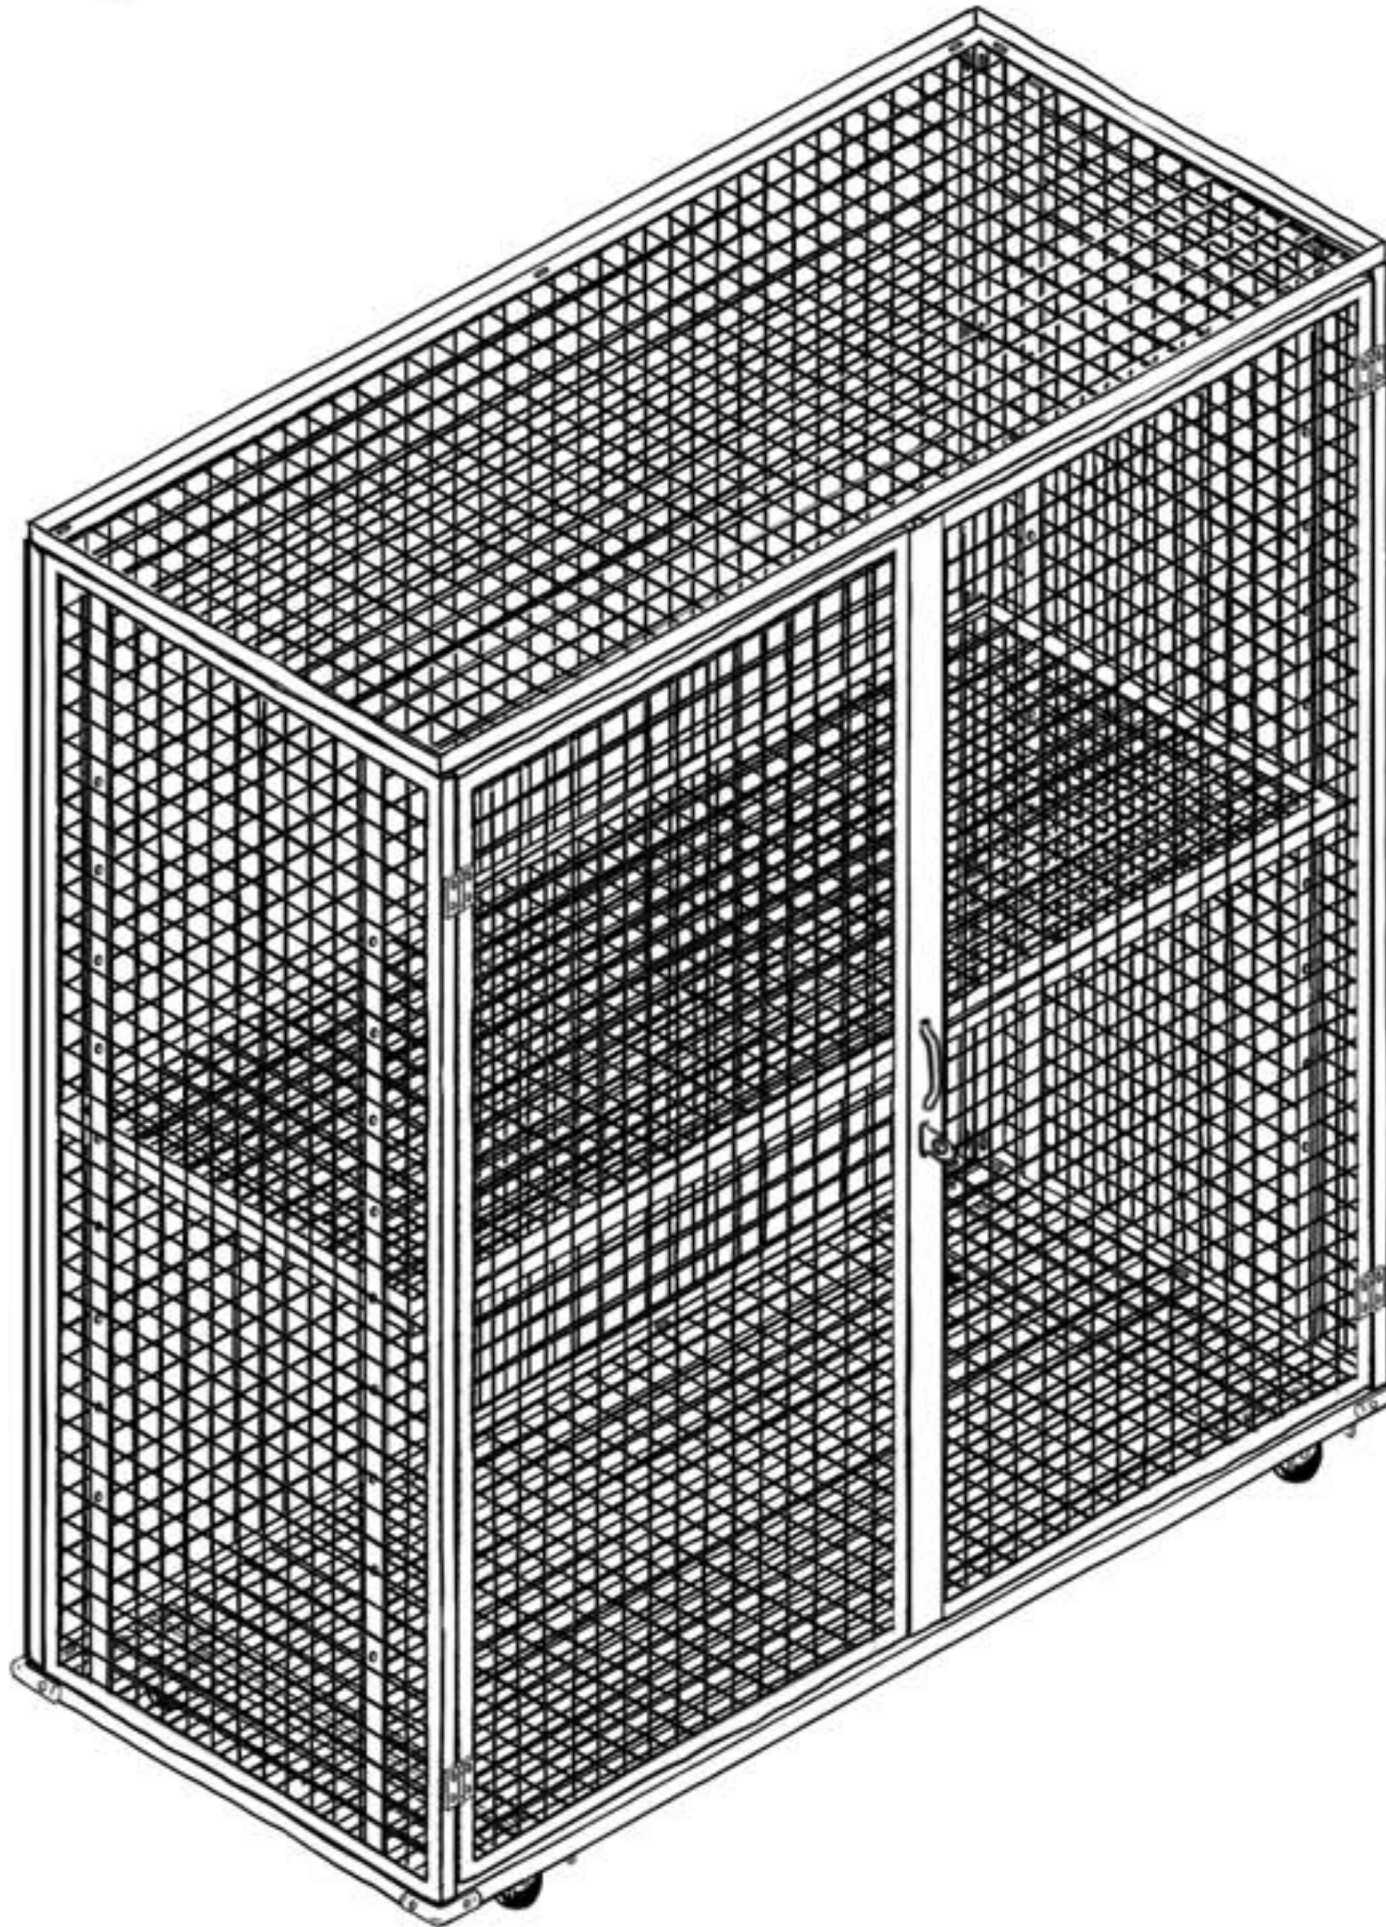

Product	Lockers
Sub-product	Mobile Locker

- 70" high standard cart.
- Double swing doors are equipped with padlock hasp and spring load bolt.
- Shelves are adjustable.
- Casters or fixed legs are available, refer to the installation drawings included with your project.




A Tradition of Quality Since 1901

STEP 1

STARTER UNIT ASSEMBLY (BASE)


Assemble together the caster or the fixed legs to the base panel.
Once assembled, attach all 4 corner rubbers to the base.

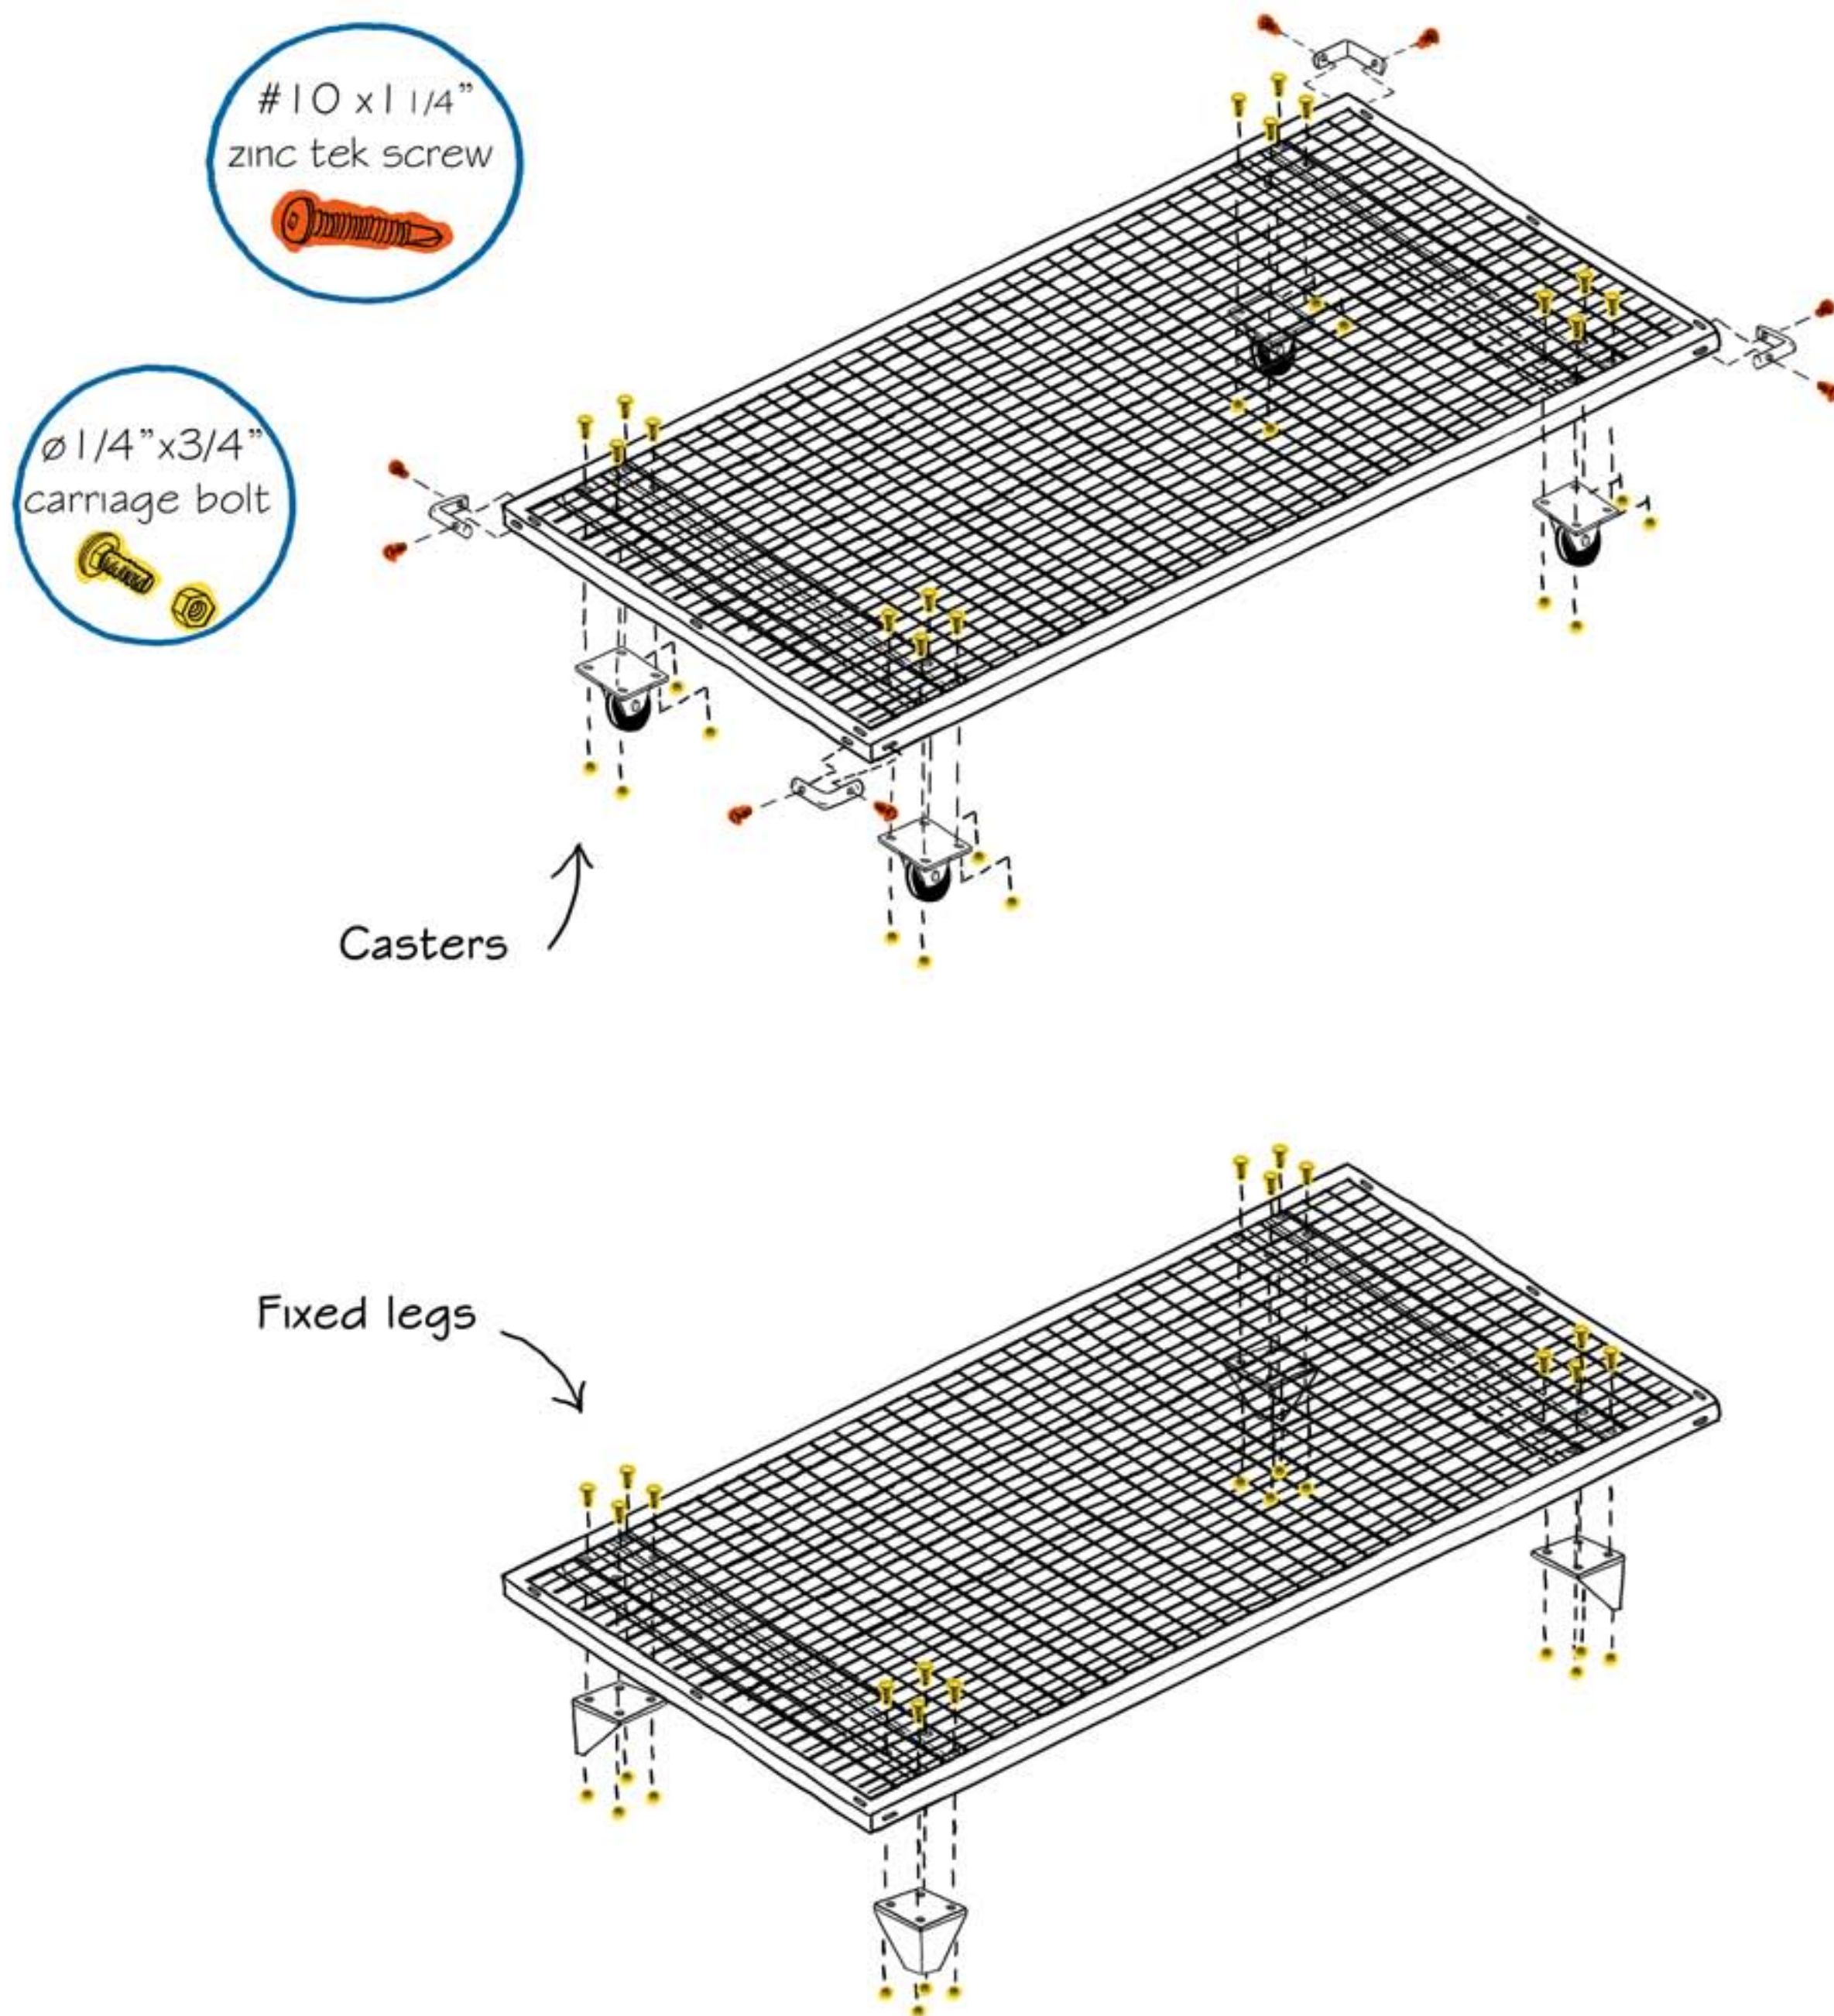


STEP 2

STARTER UNIT ASSEMBLY (SIDE PANELS)

Attach both side panels to the base by making sure to leave enough space for the tubing and the back panel (step 3).

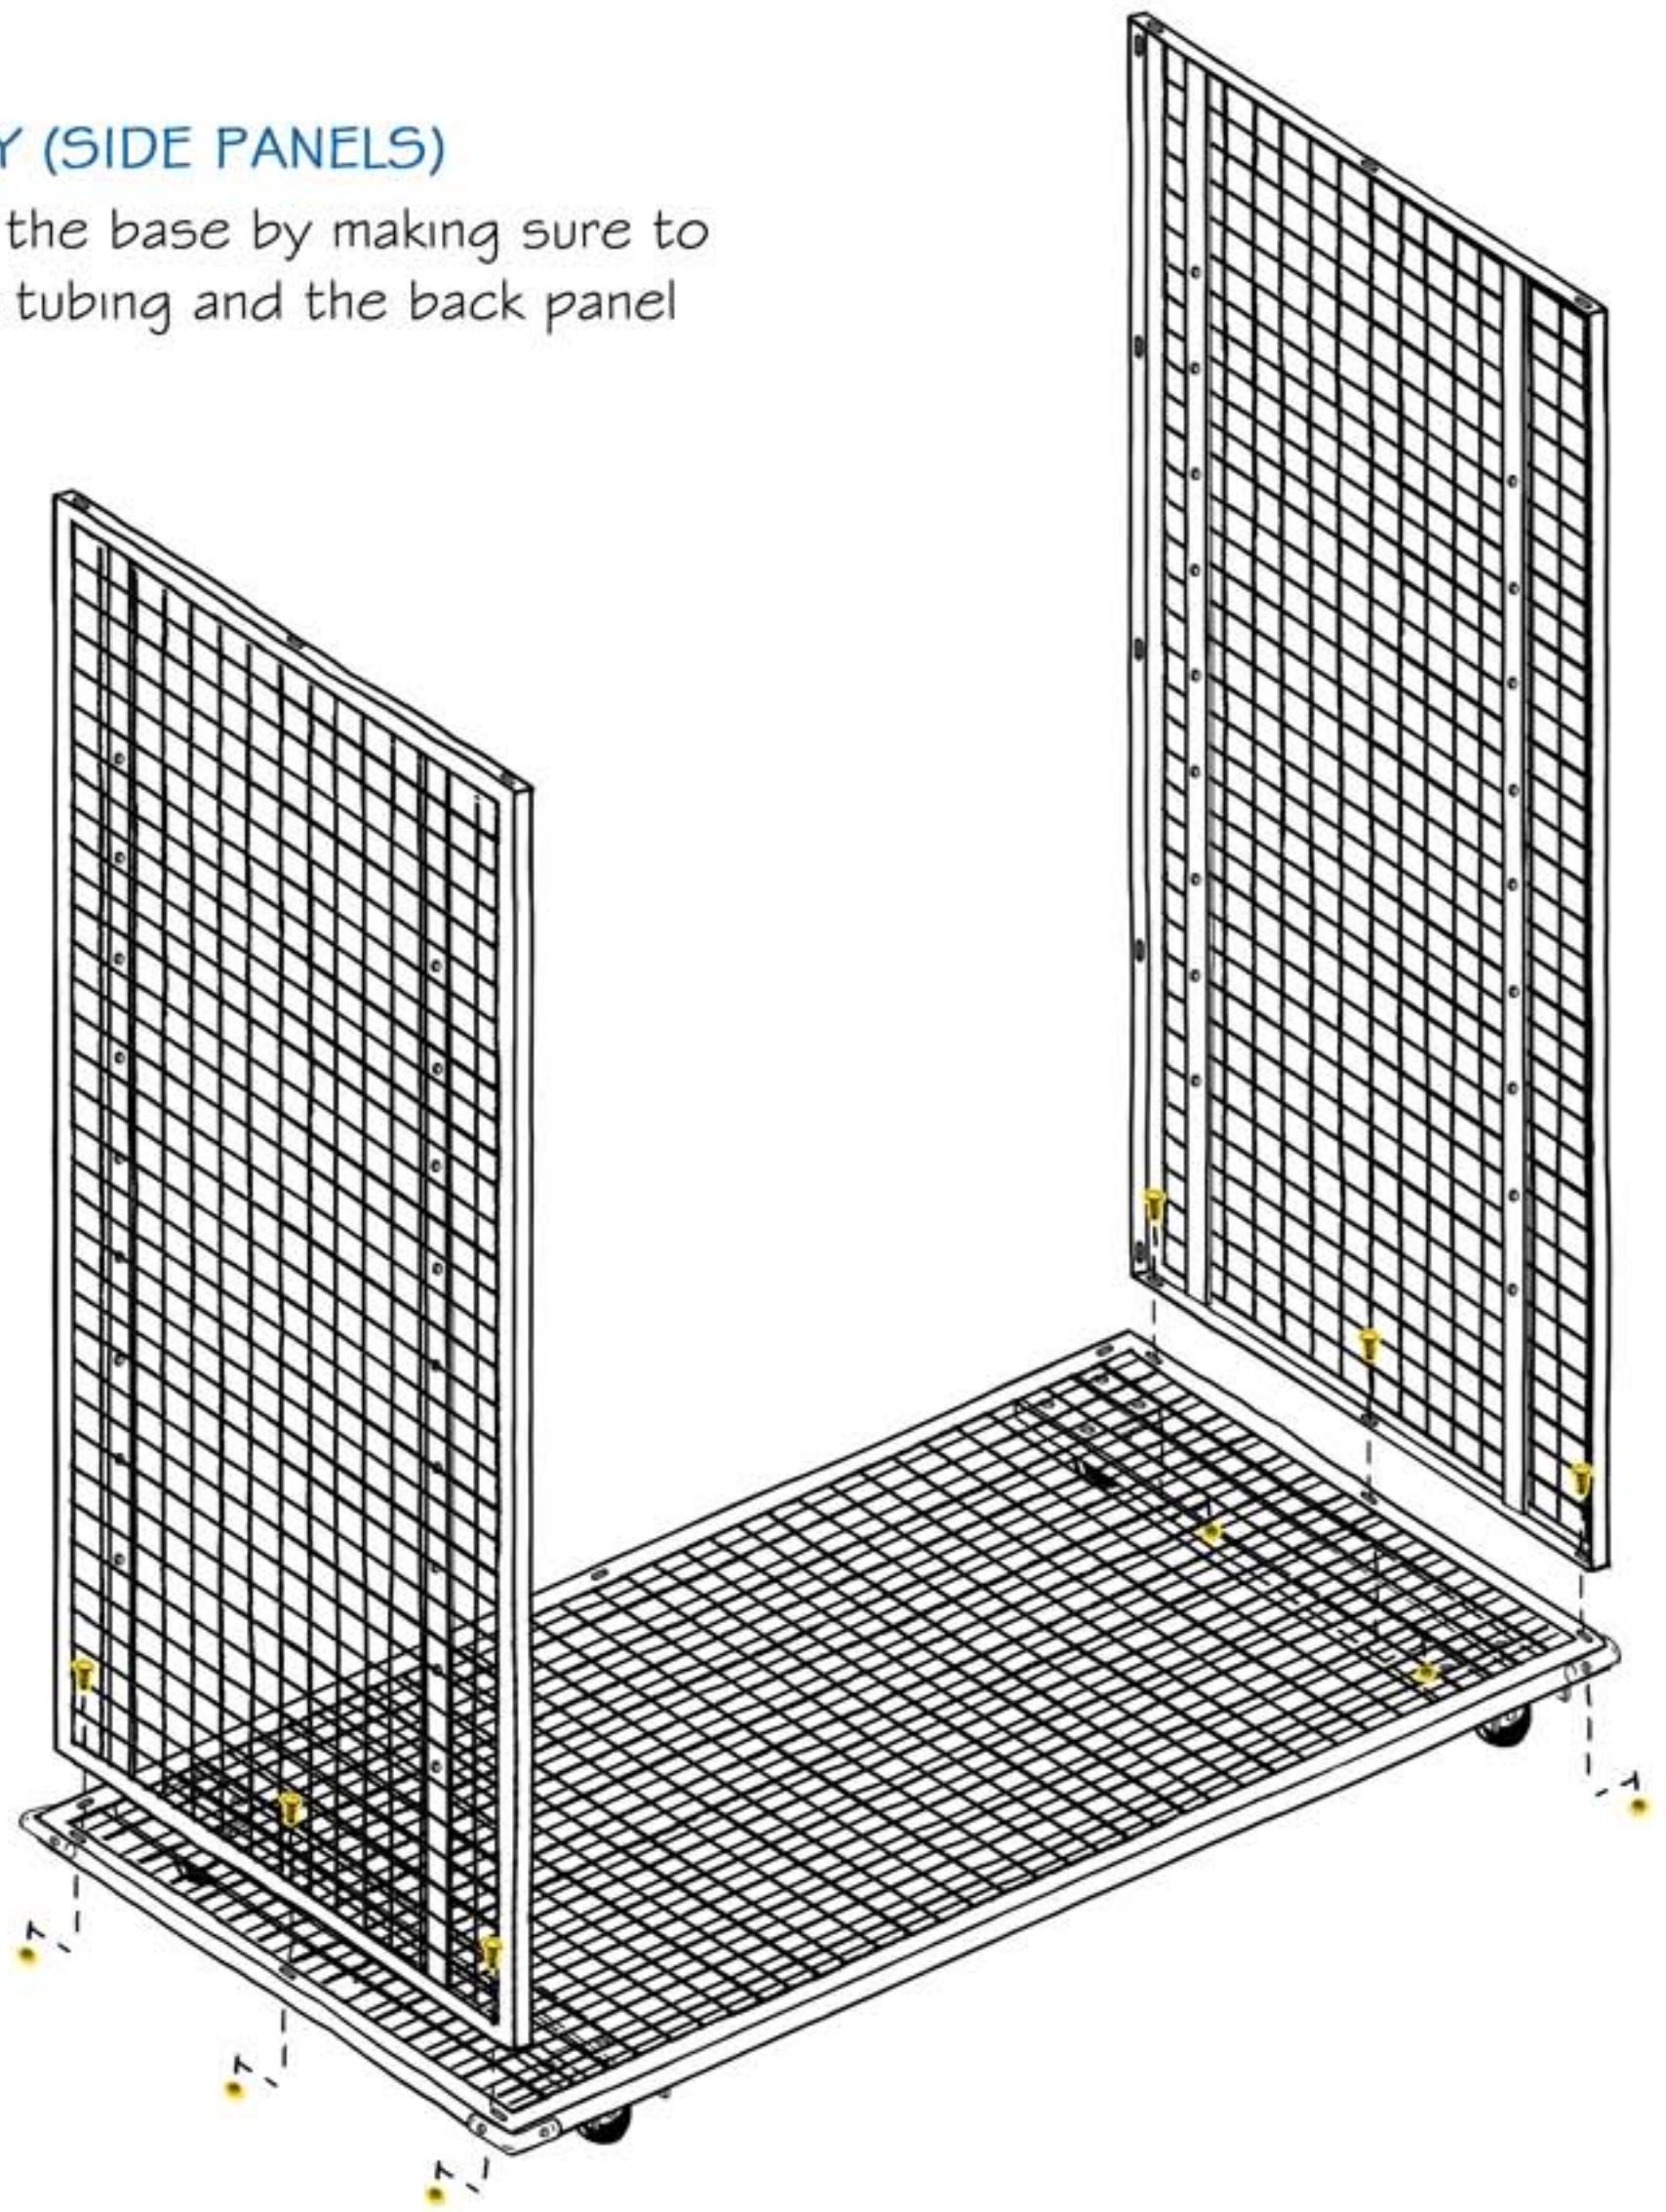


SIDE VIEW OF SIDE PANEL

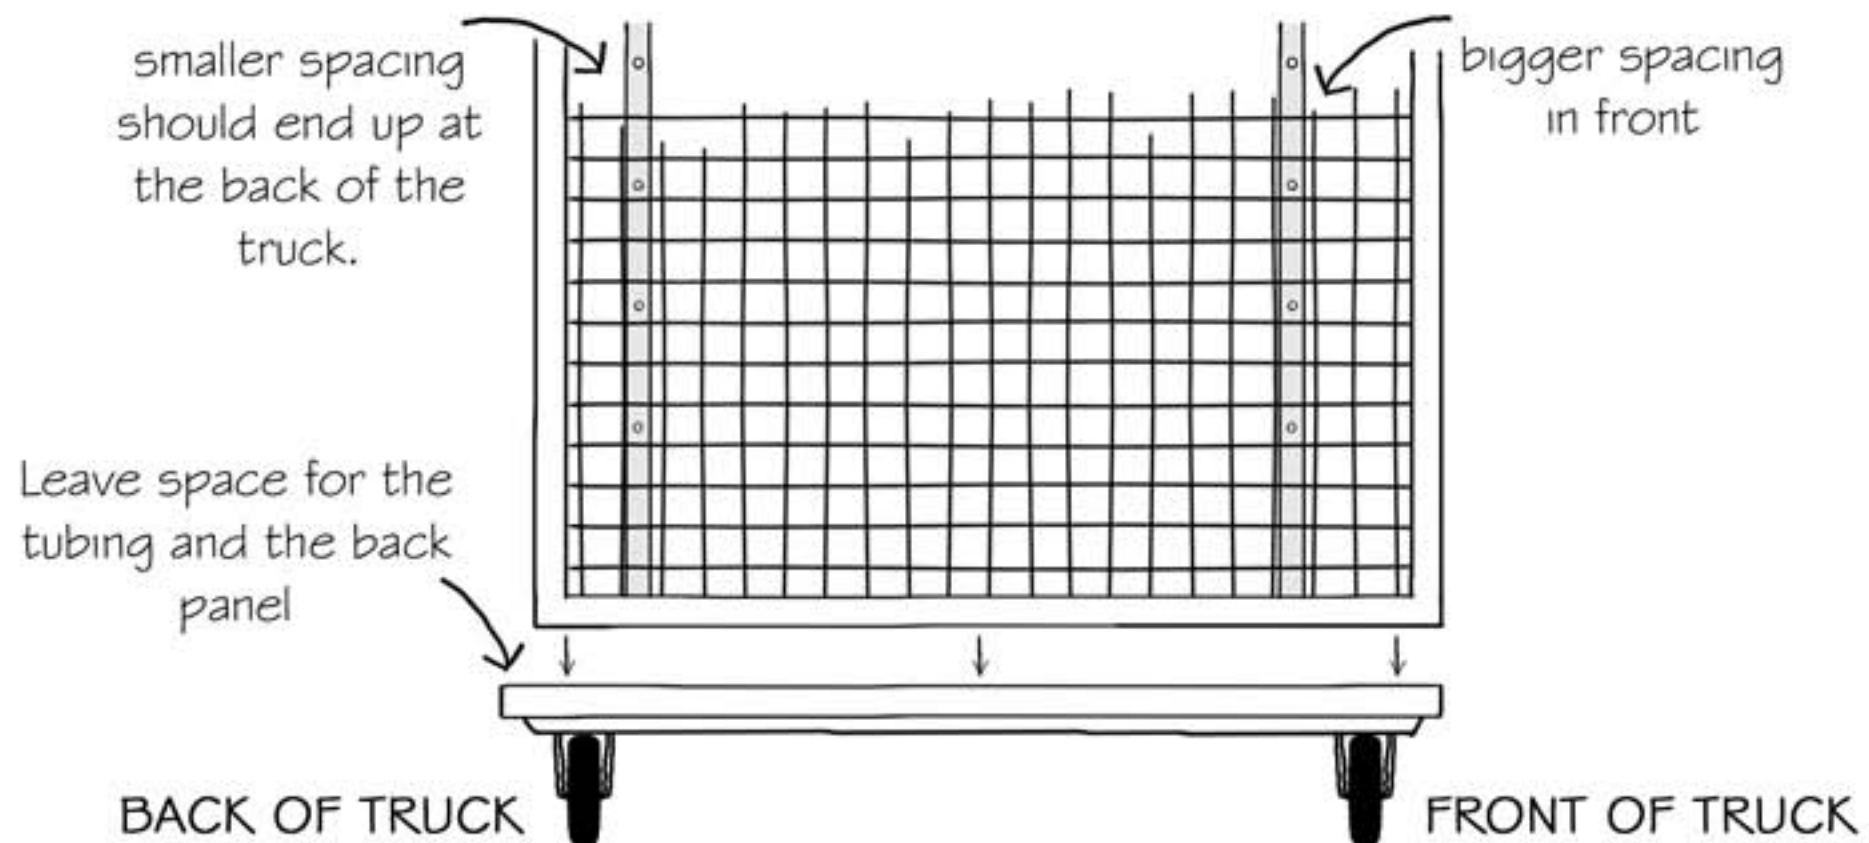

STEP 3

STARTER UNIT ASSEMBLY (BACK PANEL AND STRUCTURAL TUBING)

Assemble together the back panel and both tubing, then bolt to the side panels and the base.


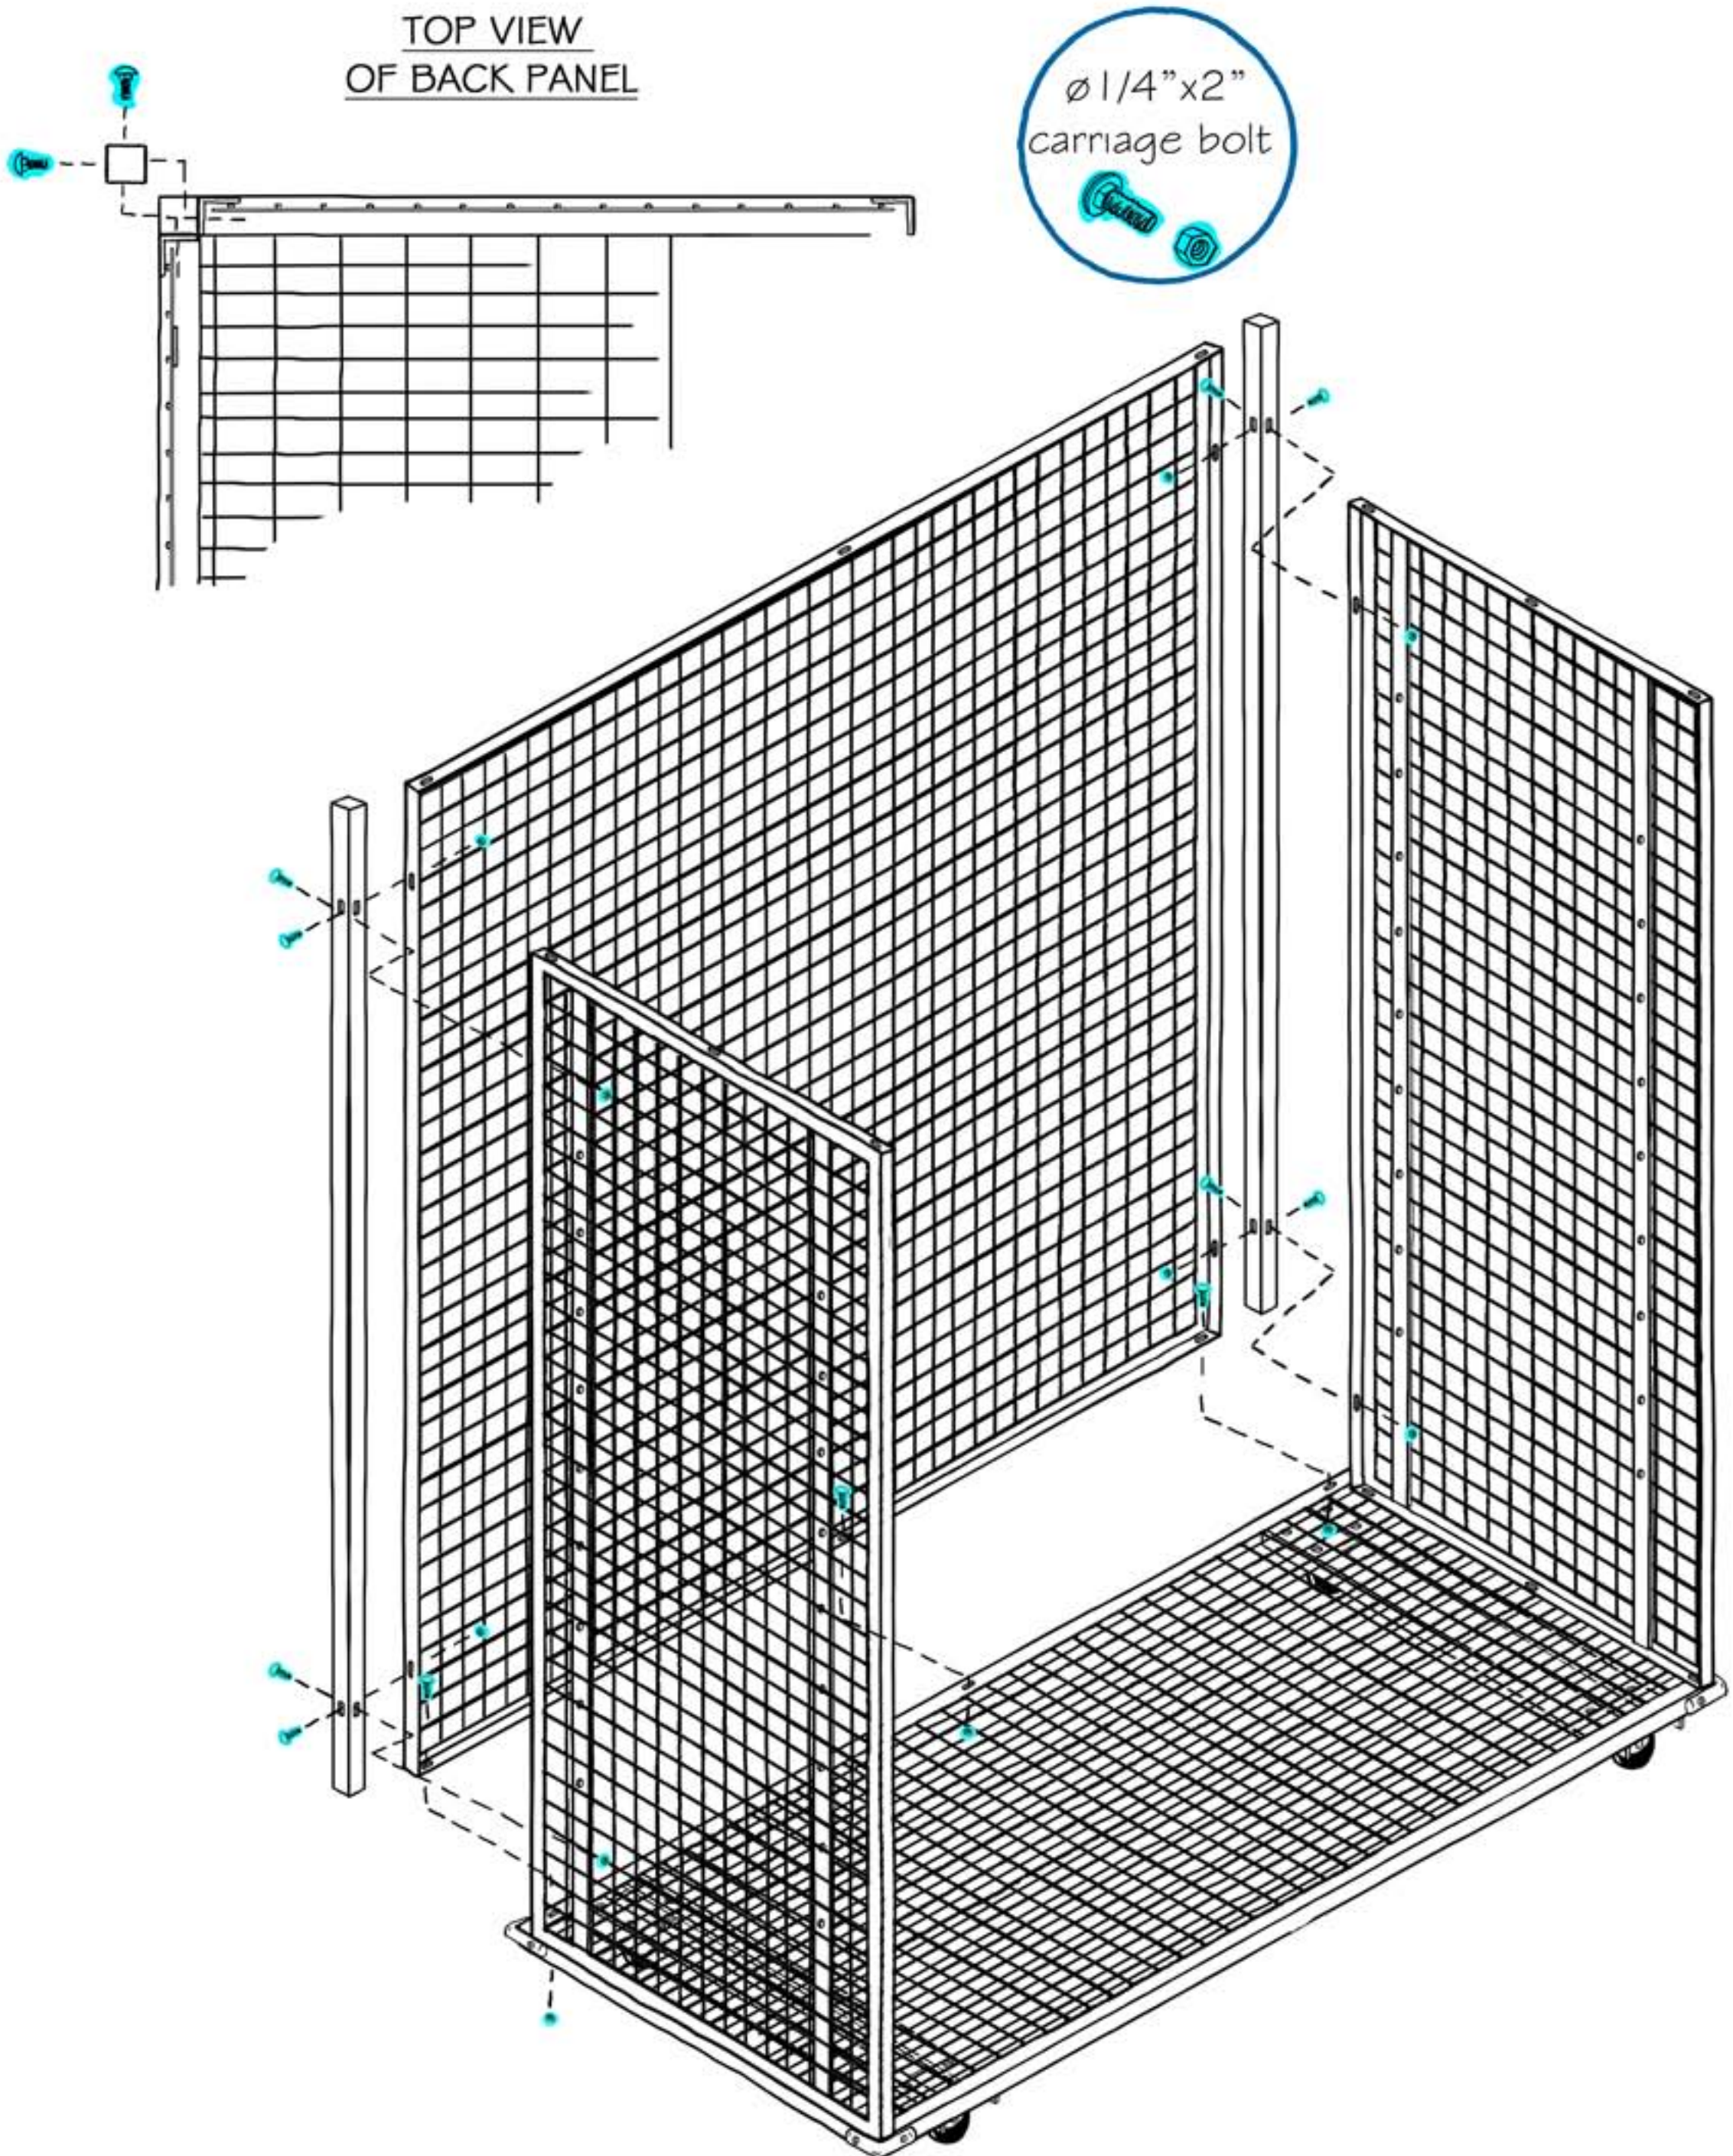


STEP 4

OPTIONAL REINFORCEMENT ANGLE AND ROOF PANEL

Either one of the following is required to install with your industrial truck if no shelf is installed.

Please review your engineering drawing for details.

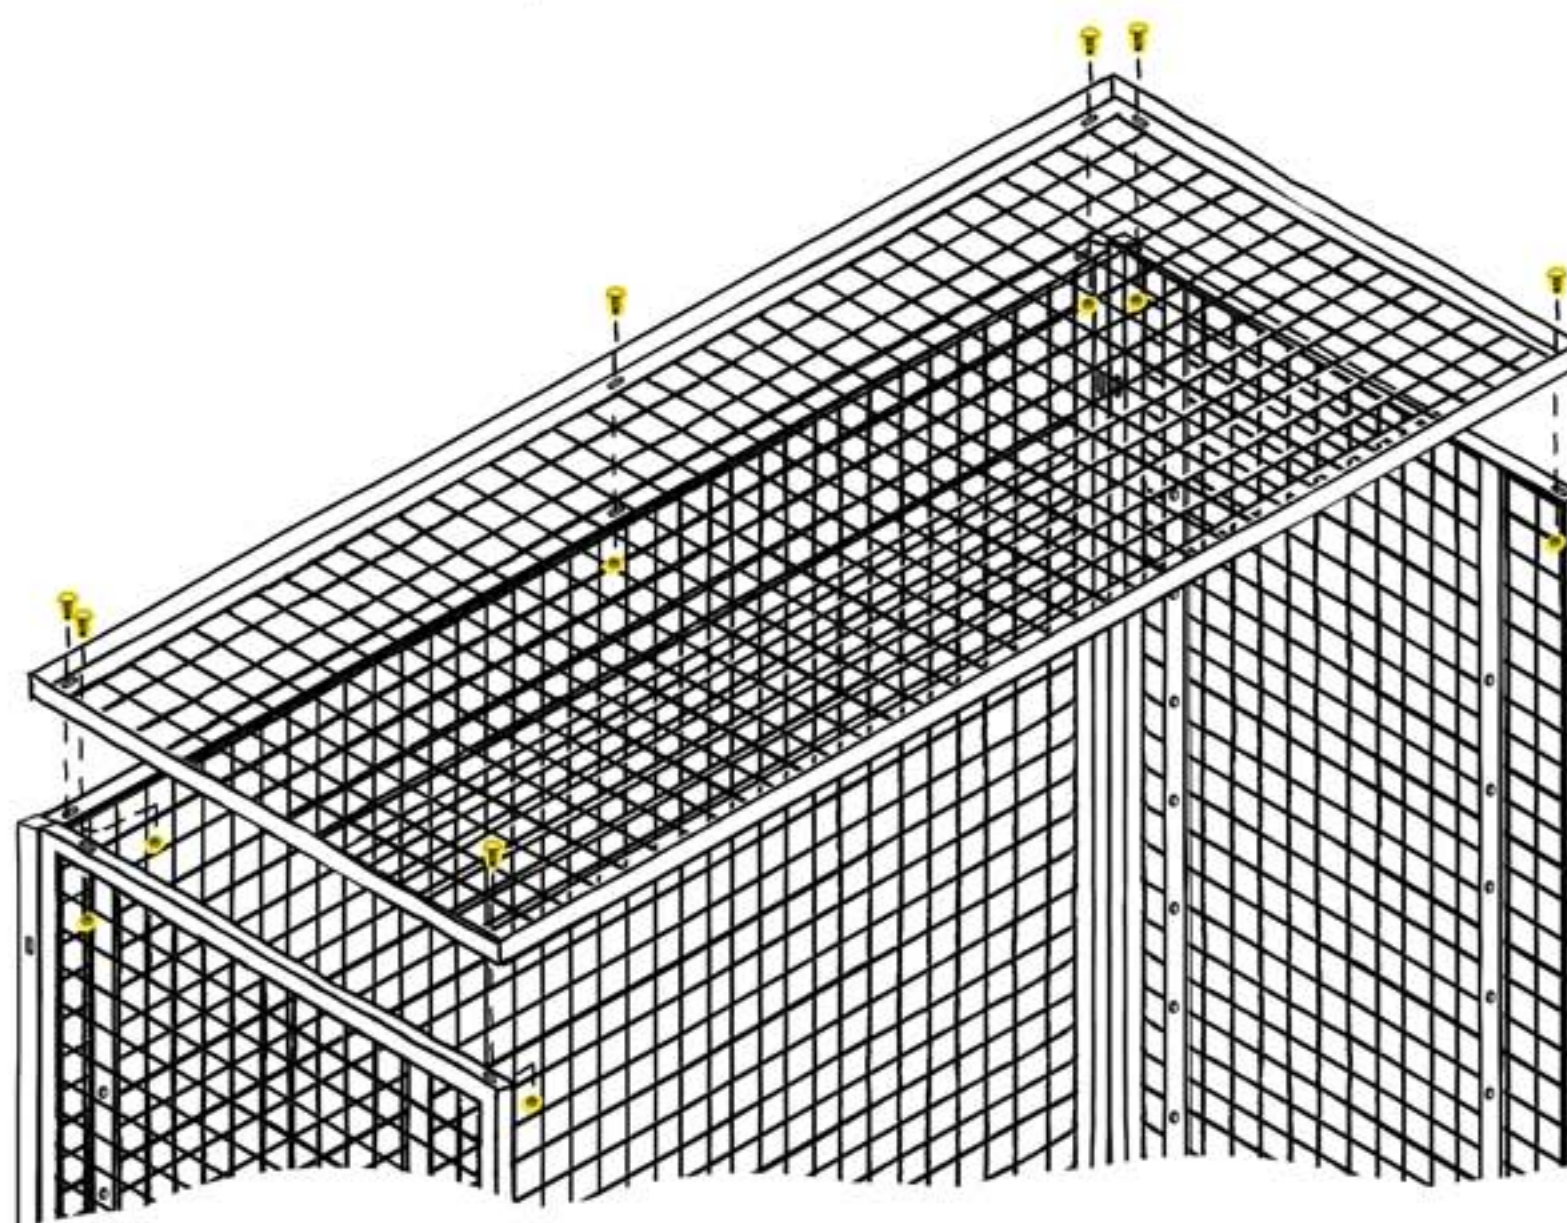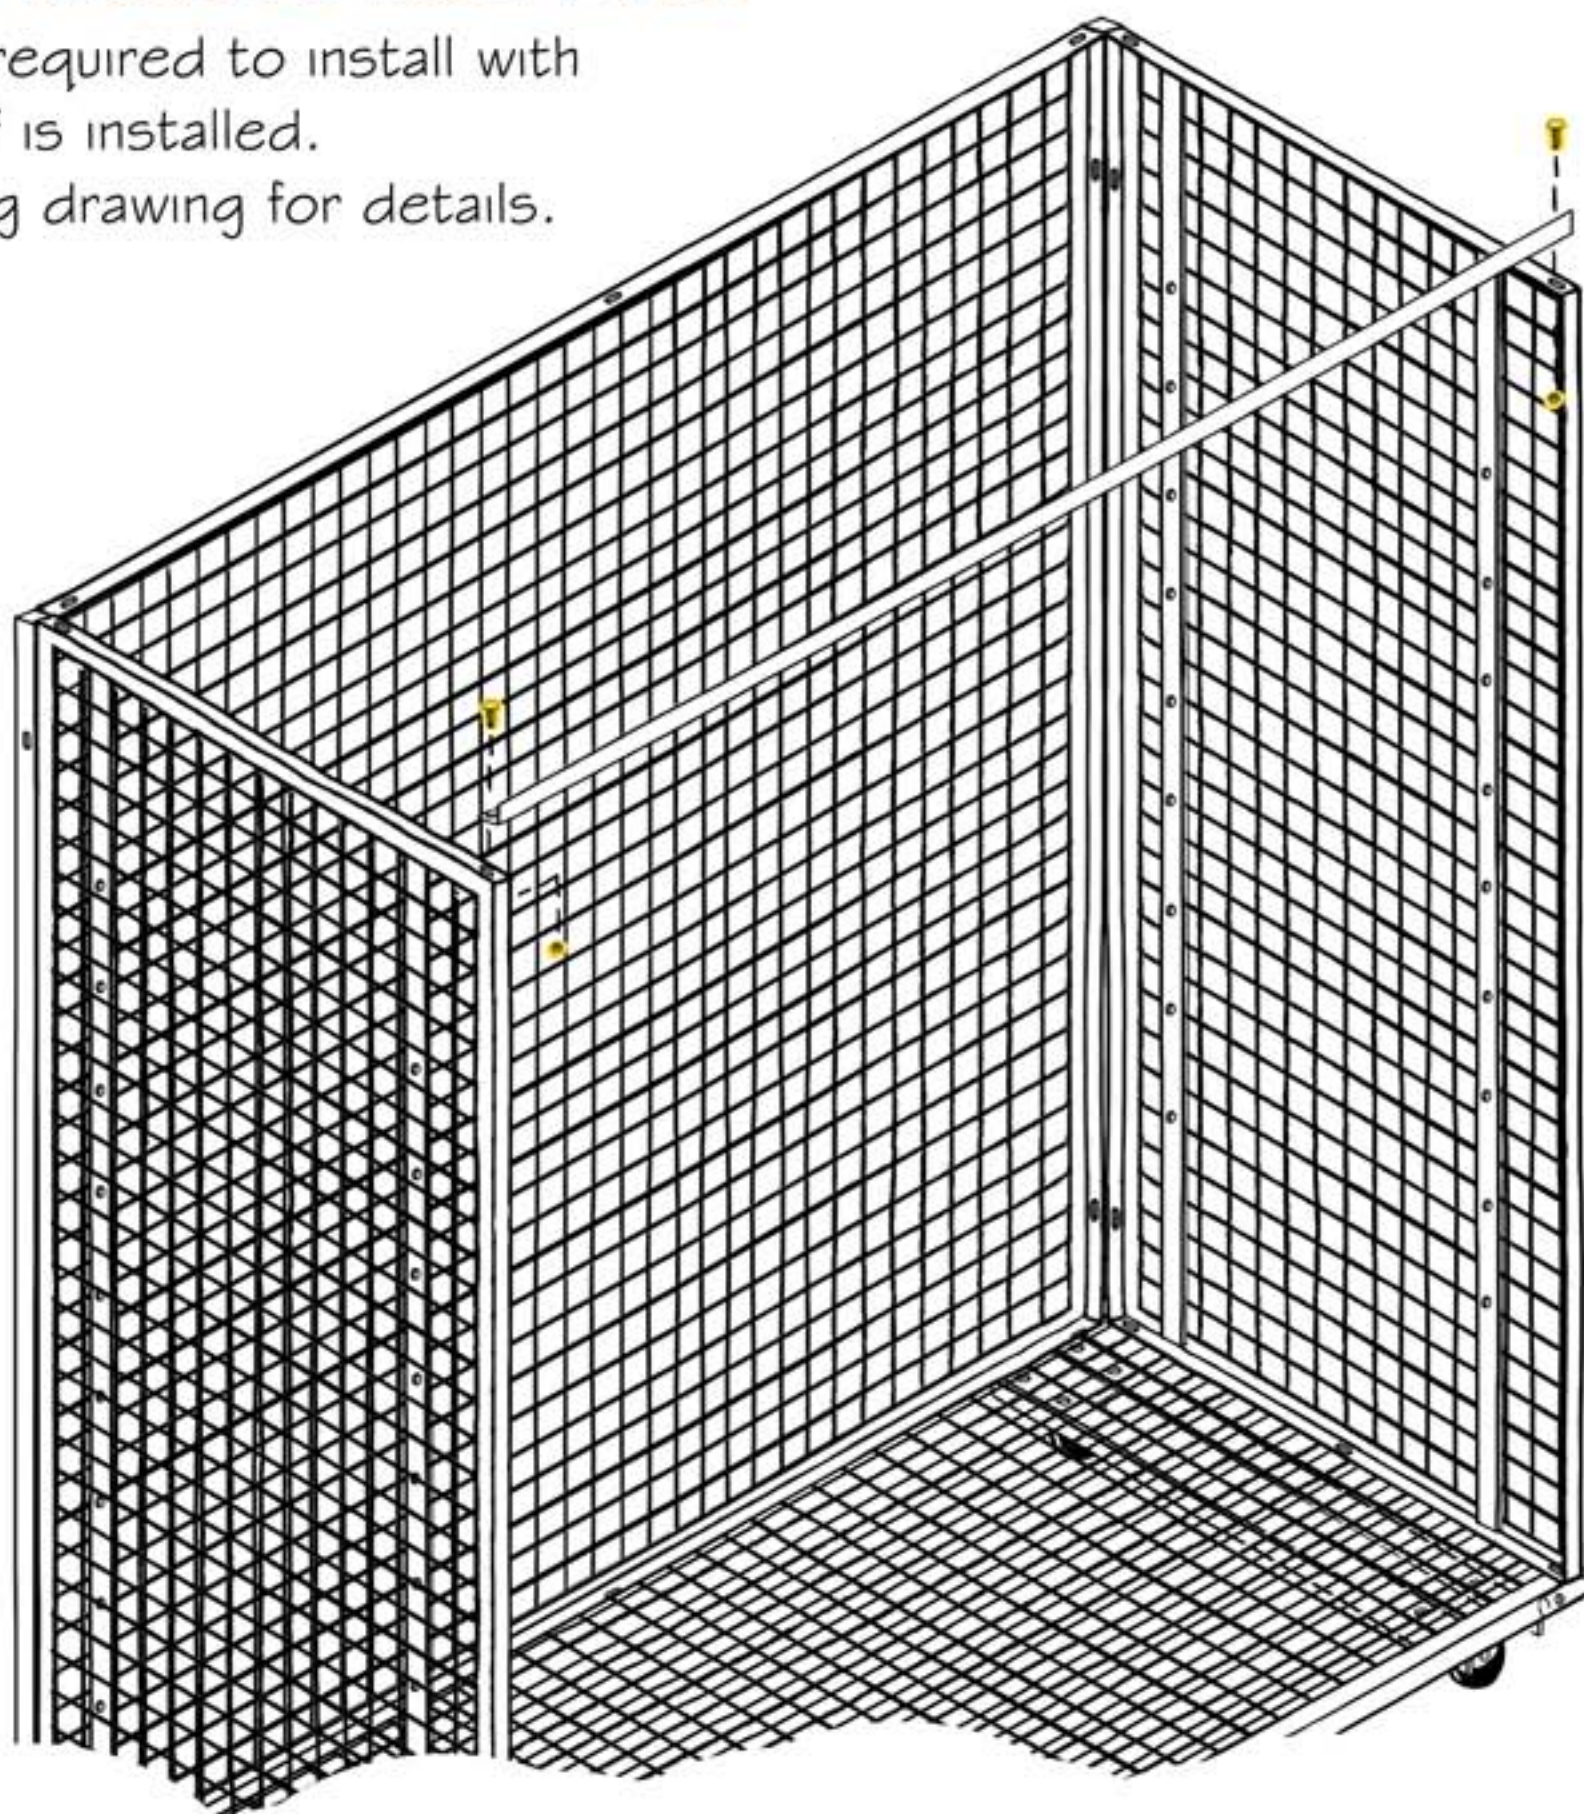


STEP 5


OPTIONAL SHELF

If included, install any of these shelves using the pre-punched side panels support system.



WIRE MESH SHELF

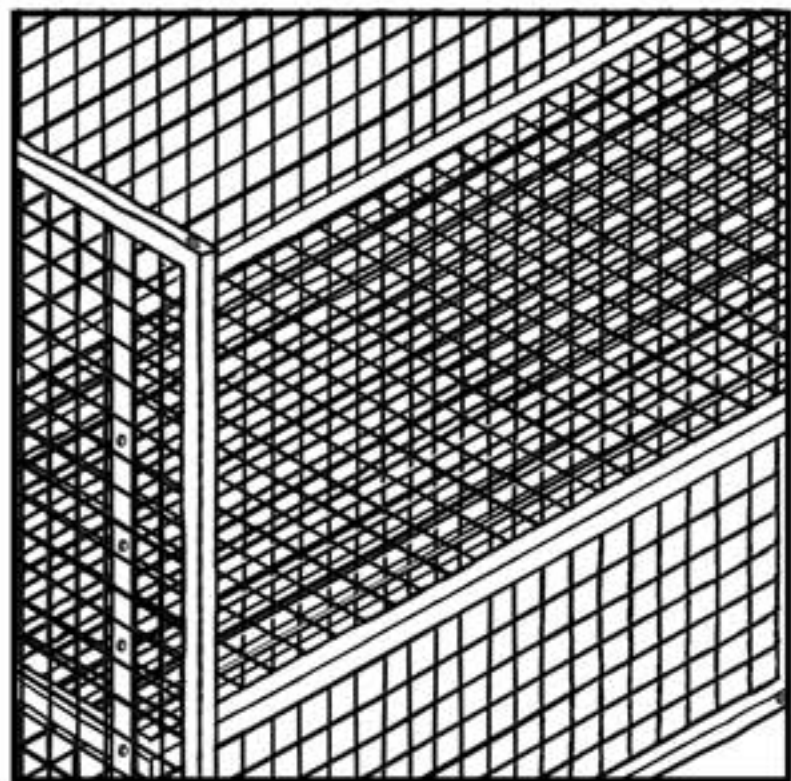

ANGLE FRAME SHELF WITH WELDED STOPPER

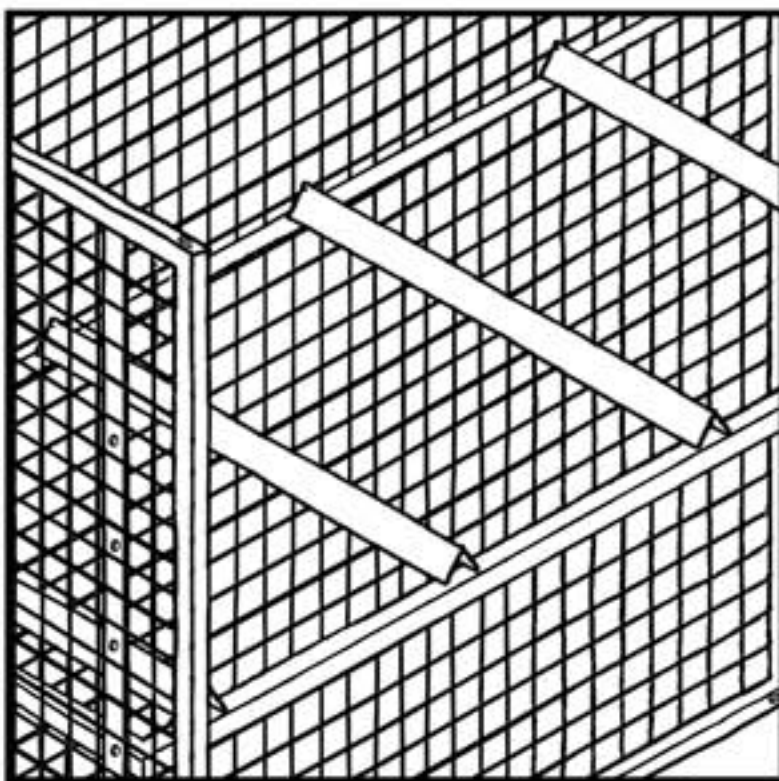


WIRE MESH SHELF WITH PLASTIC OVERLAY

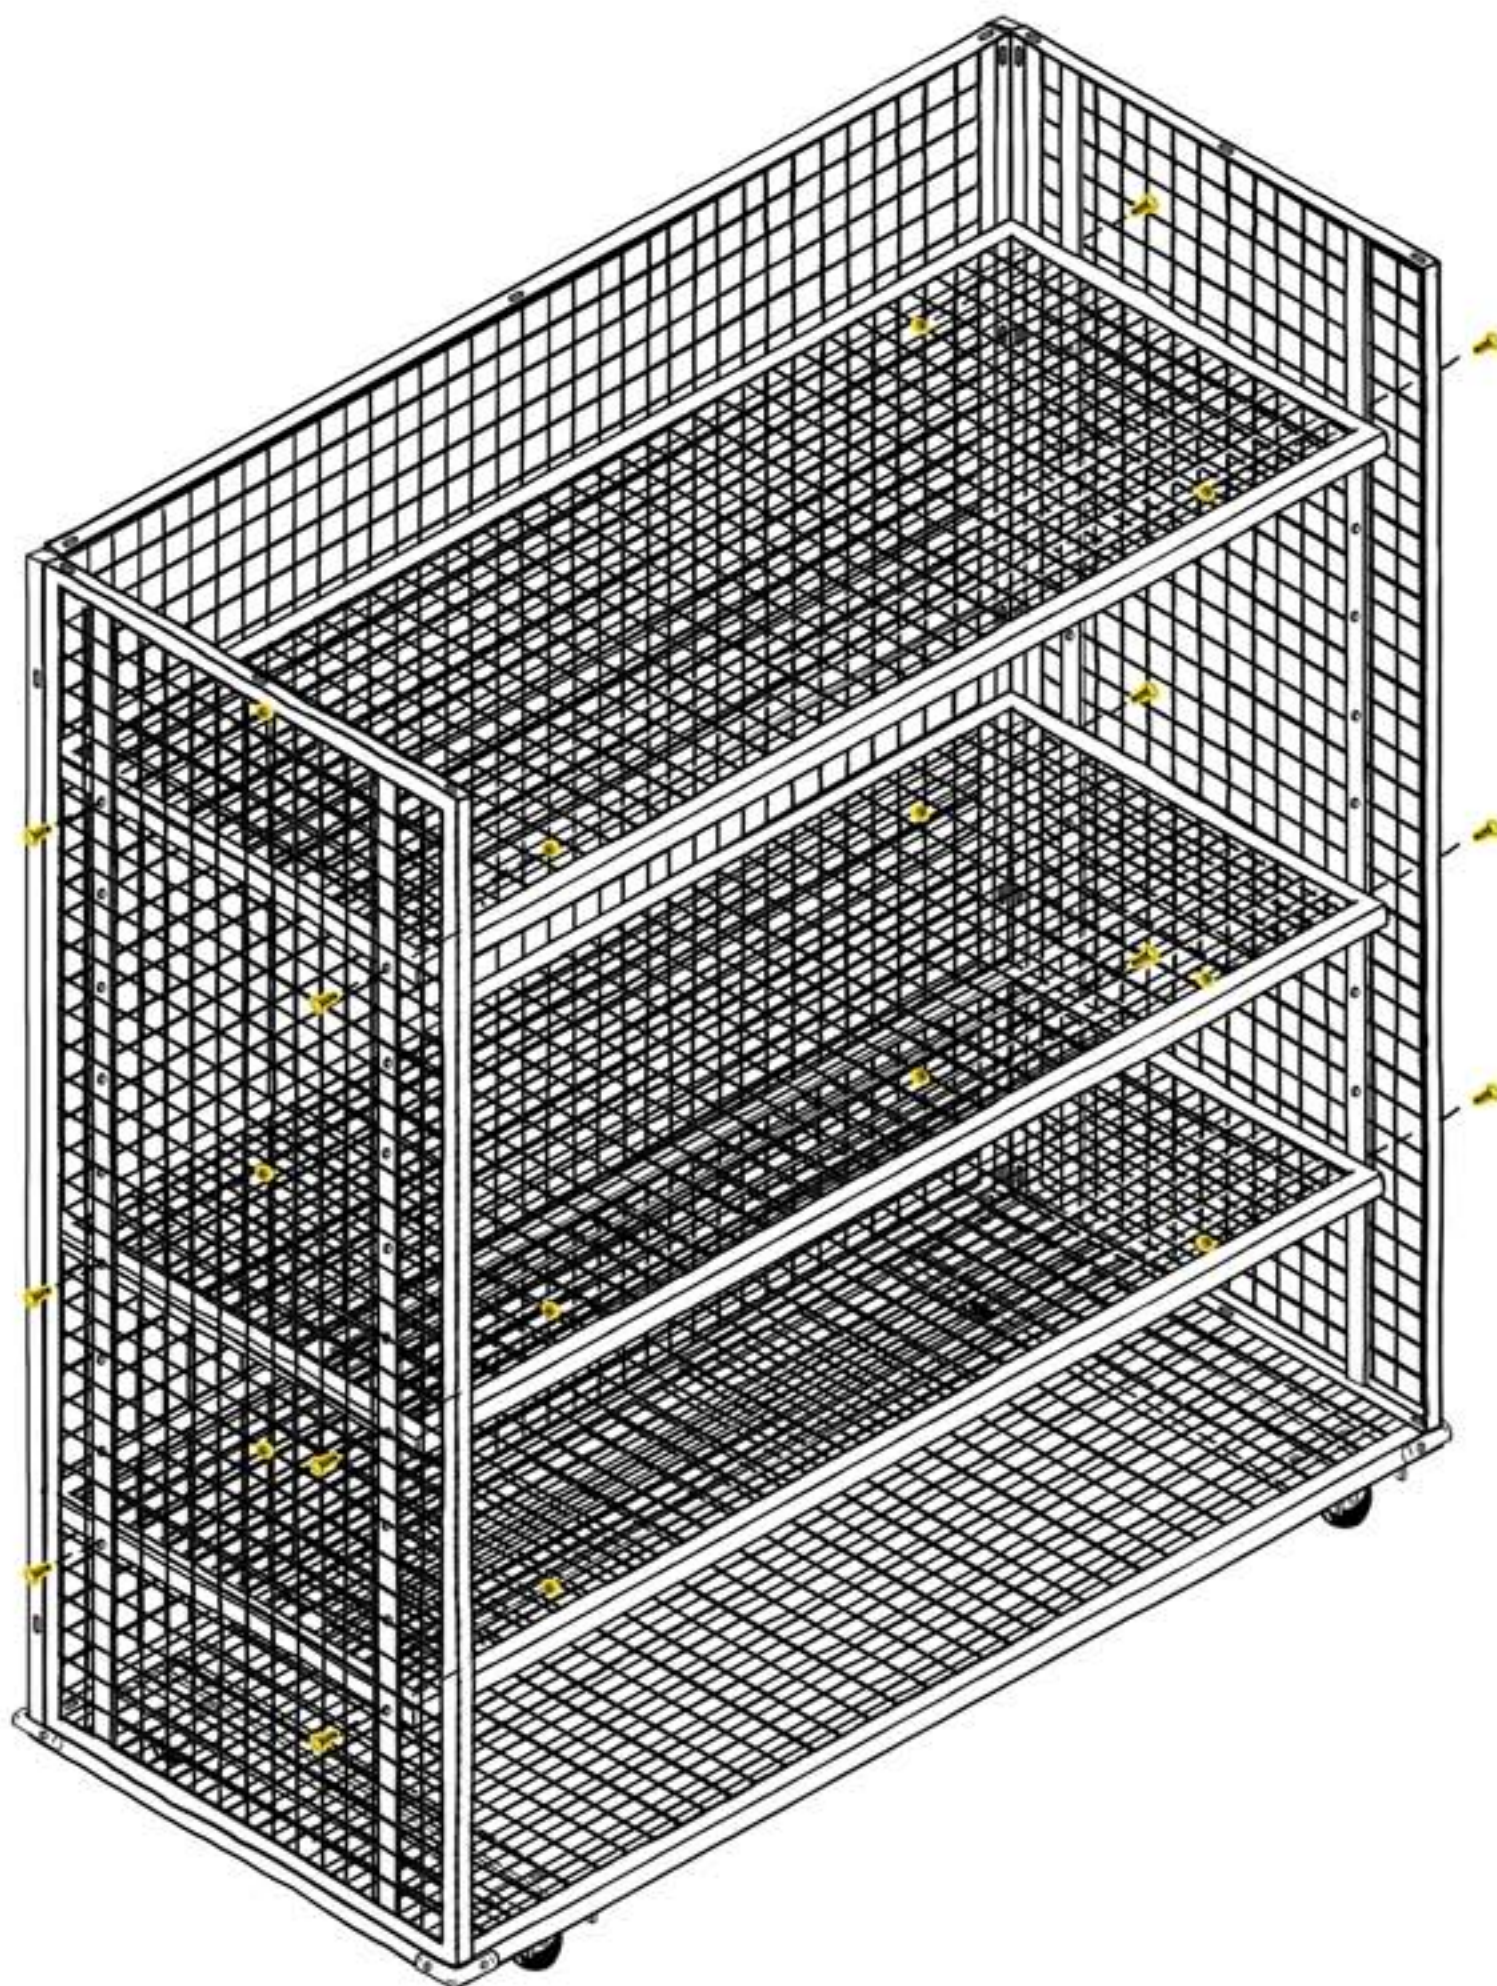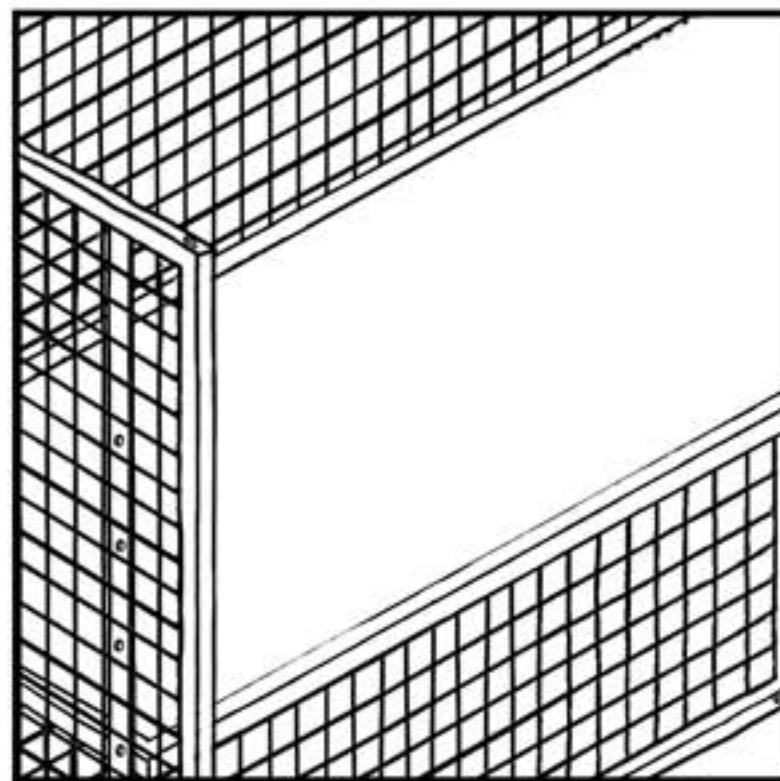

STEP 6

OPTIONAL COAT ROD




If included, install the coat rod using the pre-punched side panels support system as shown below.

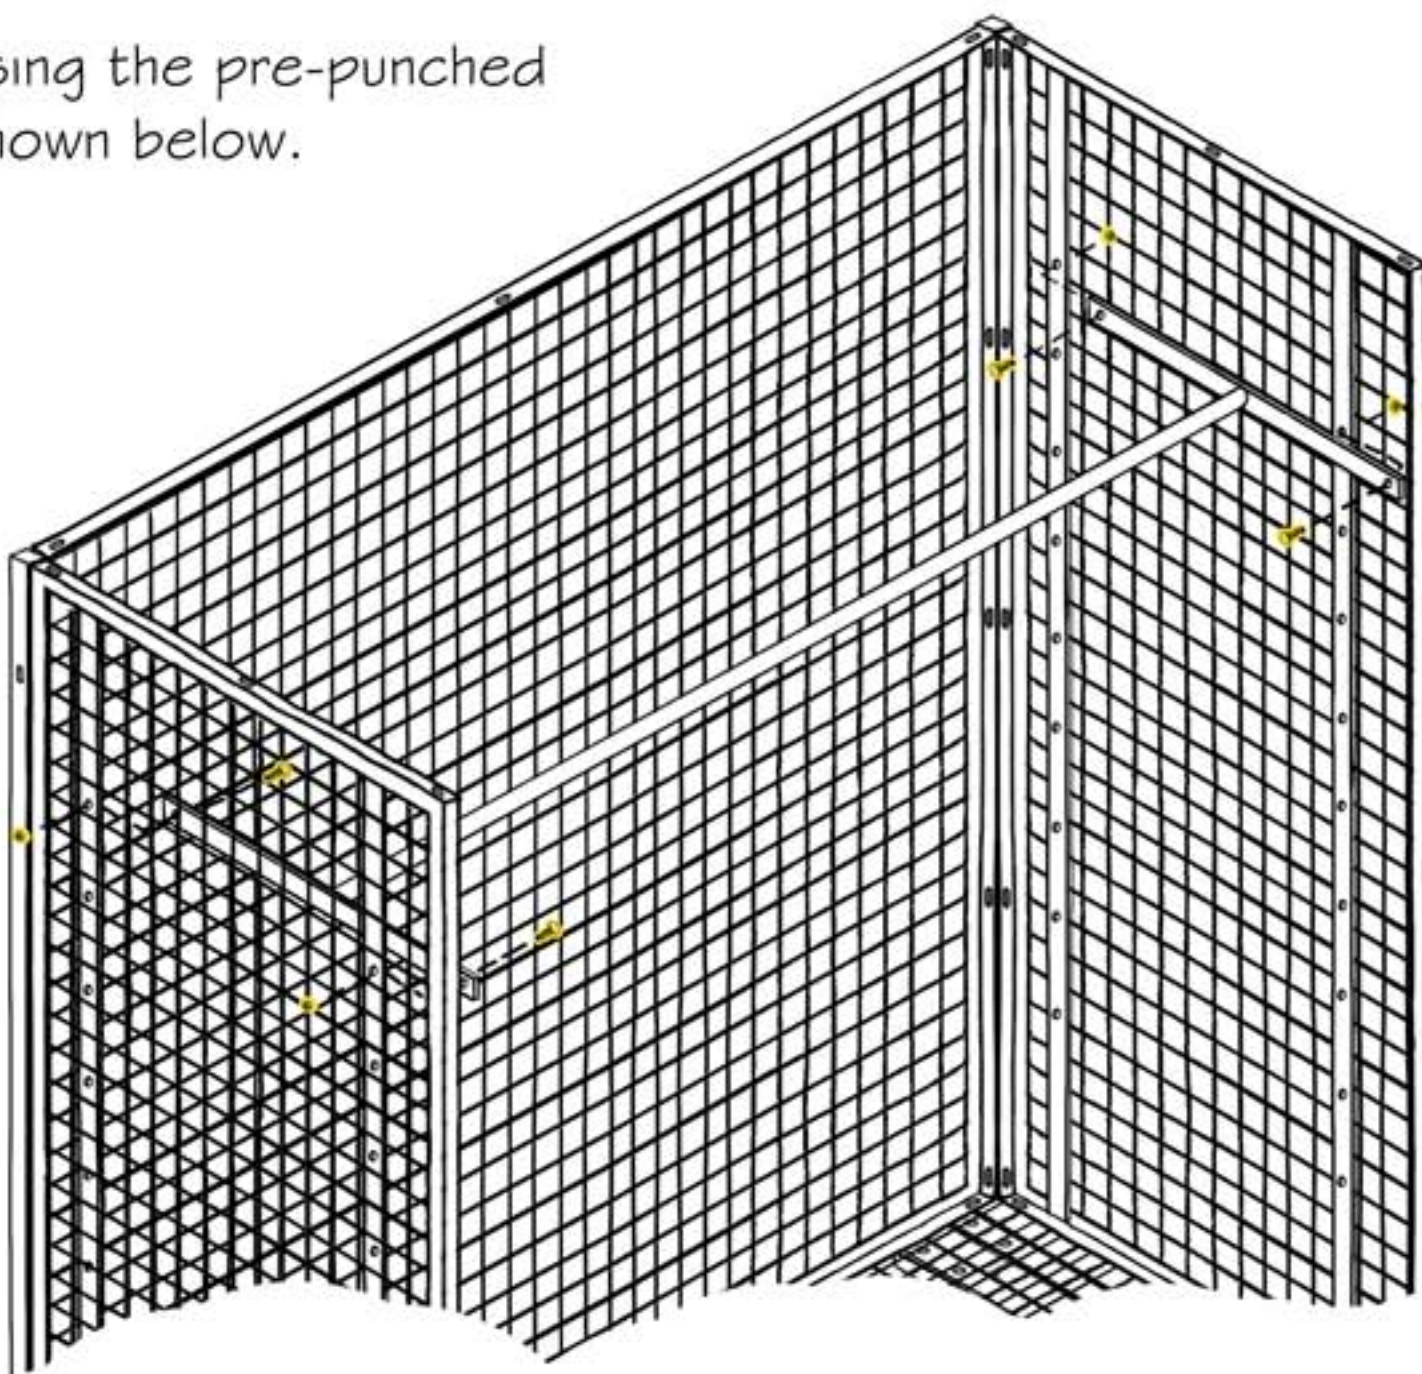

STEP 7

PUSH HANDLE AND "L" HANDLE

Please follow the steps below related to the proper handle included in your project. The push handle is directly welded on the right side panel. The "L" handle needs to be bolted to the base.

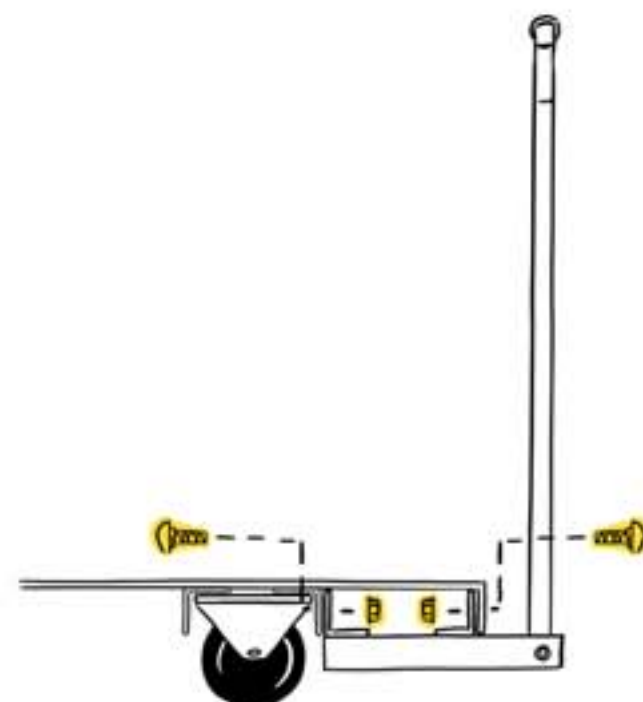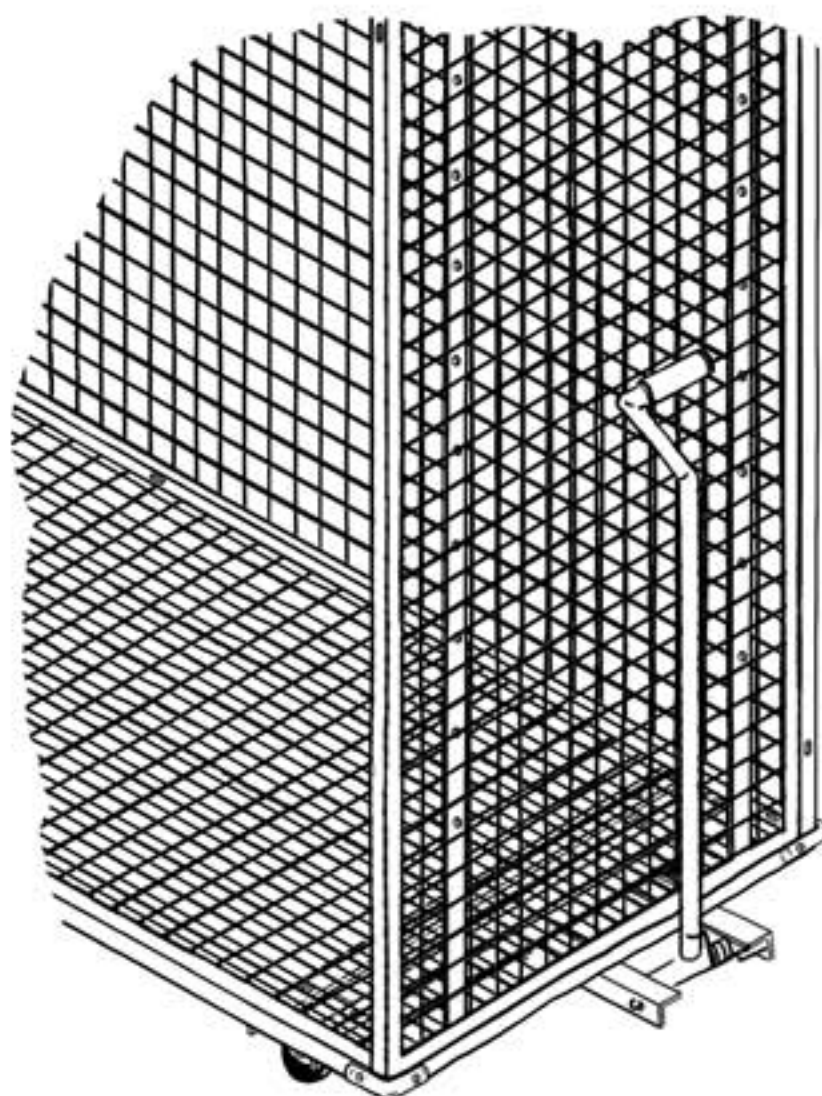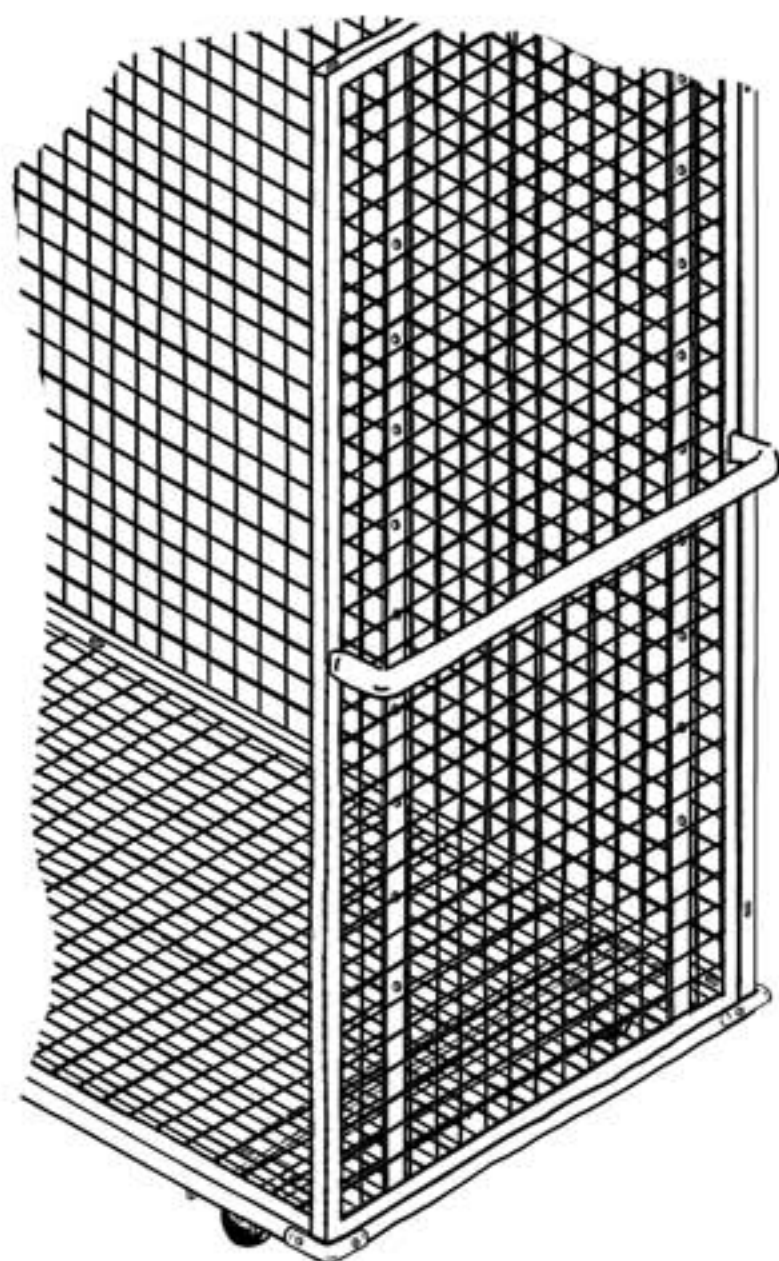


STEP 8

OPTIONAL DOORS

Install both doors by bolting the hinges to each side panel. Adjust the height of each door so that the hasp slides easily through the plate and you can secure the cart.


When securing the cart, always lock the left hand door with both upper and lower slide bolt latch first, then secure the doors together using the door hasps and a locking device.
(locking device not provided)

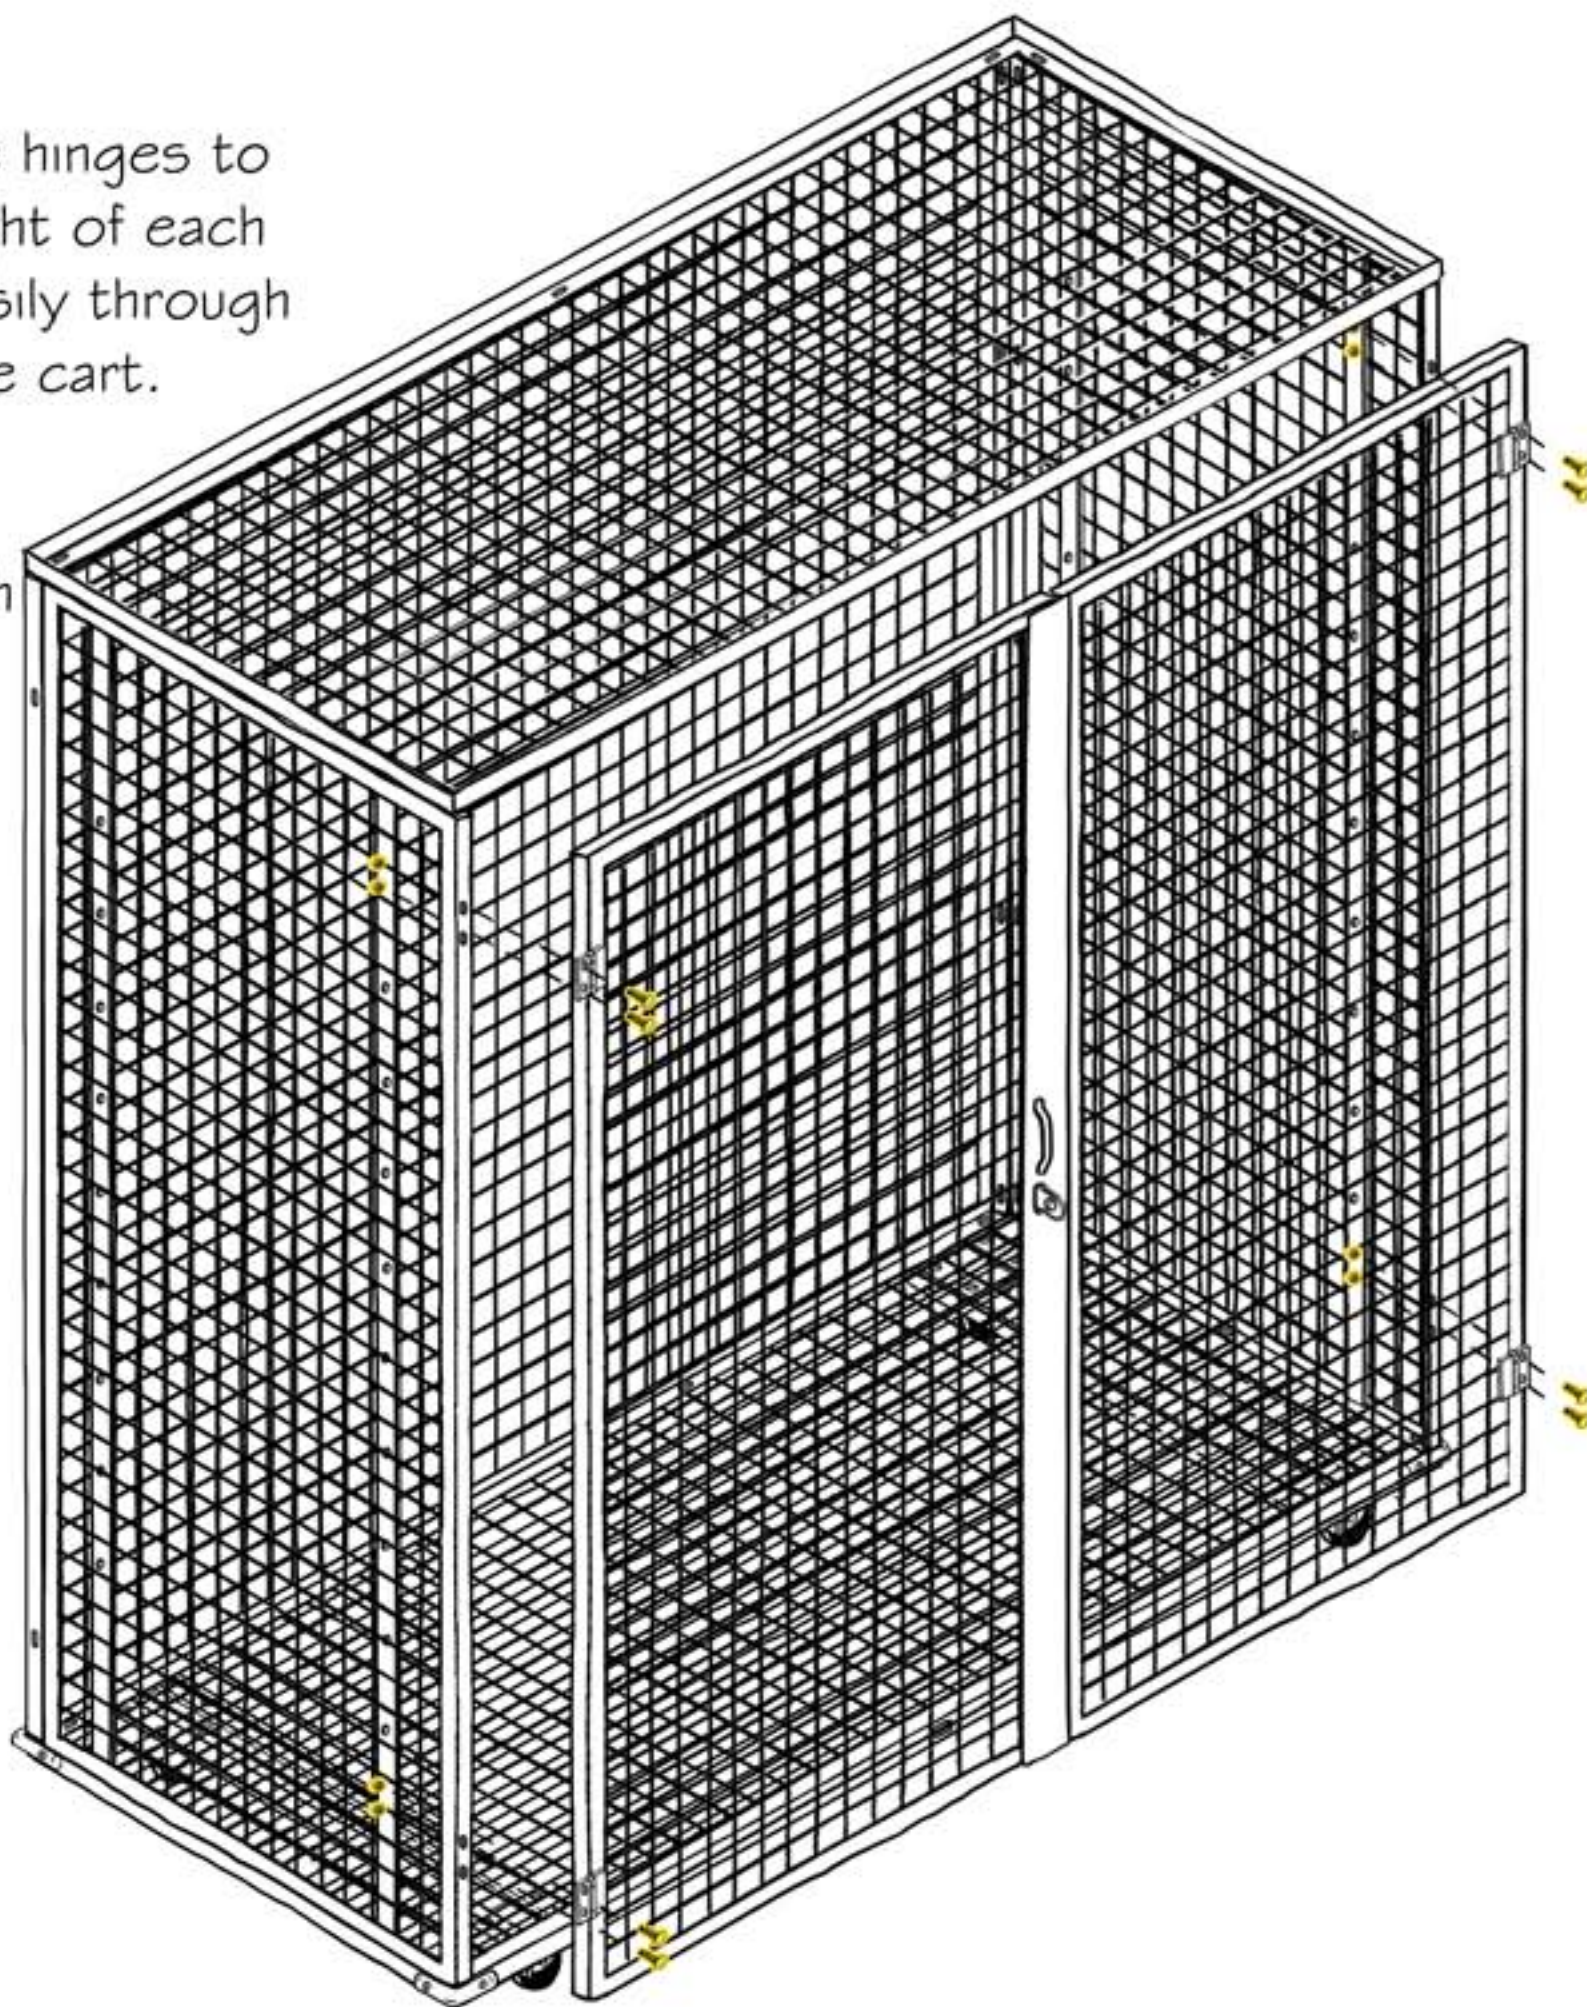

STEP 9

OPTIONAL WELDED FORK POCKETS

If included in your order, the forklift pockets are directly welded to the base frame of the trucks.

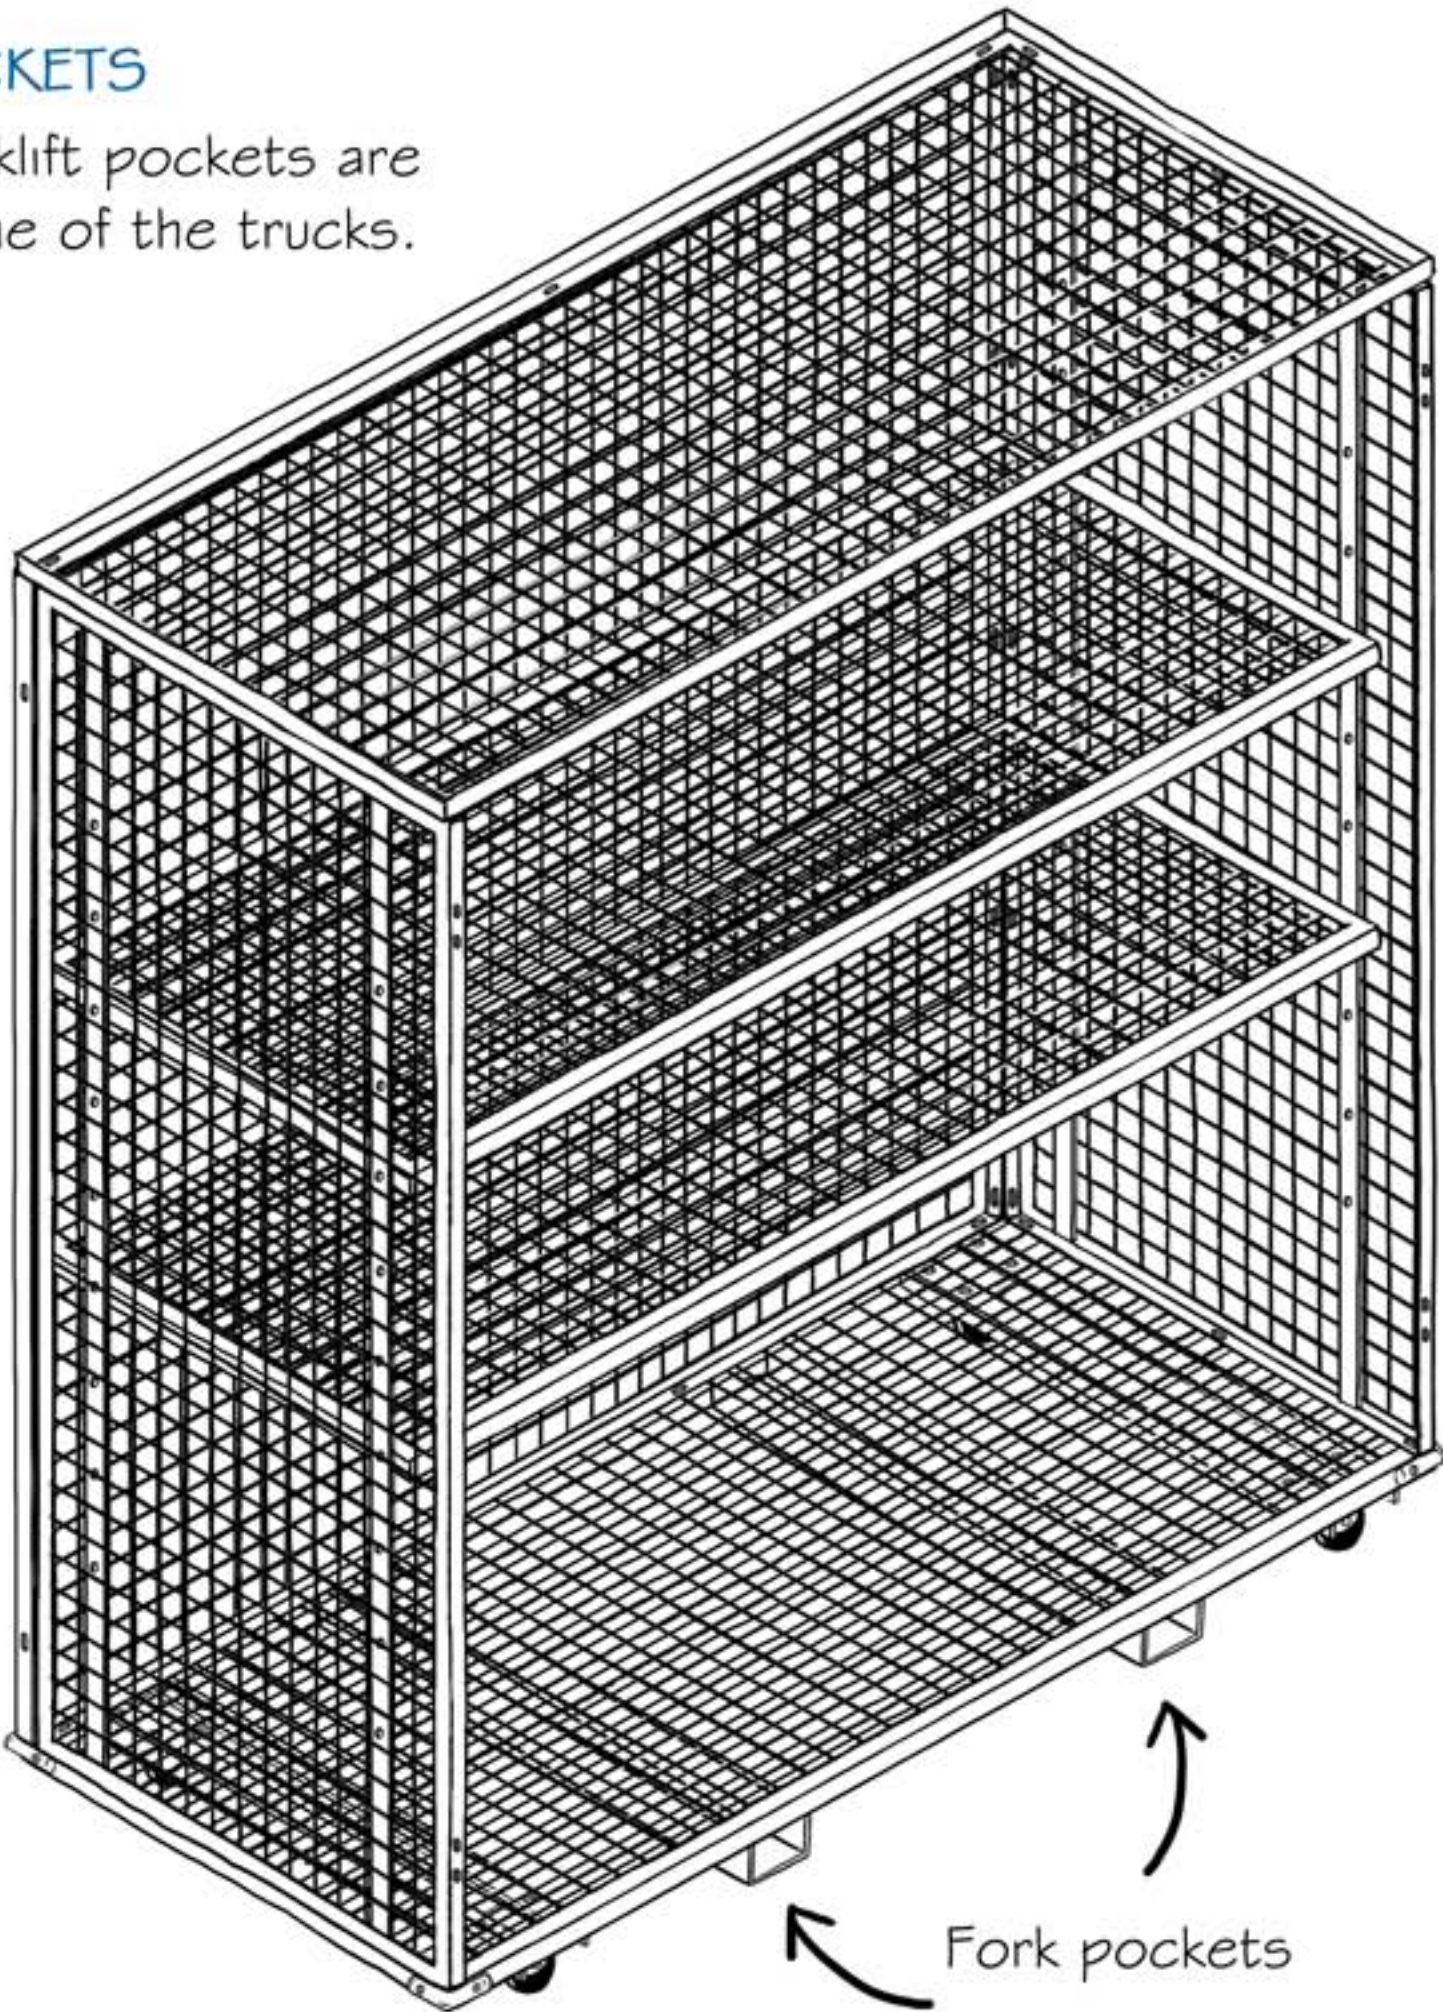

NOTES
